

P/N G02-4028-000 Rev. C March 2013





Product Registration

Register your product online by visiting:

http://www.raesystems.com/support/product-registration

By registering your product, you can:

- Receive notification of product upgrades or enhancements
- Be alerted to Training classes in your area
- Take advantage of RAE Systems special offers and promotions

Contents

Read Before Operating	3
1. General Information	6
2. Specifications	7
3. Overview	8
4. User Interface	9
4.1. Display Overview	. 10
4.2. Status Indicator Icons	
5. Charging The ToxiRAE Pro LEL	. 11
5.1. Removing The ToxiRAE Pro LEL From The Charging Cradle	. 12
5.2. Low Voltage Shutoff	
6. Turning The ToxiRAE Pro LEL On	. 13
7. Turning The ToxiRAE Pro LEL Off	. 14
8. Testing The Alarms (Manually)	. 14
9. Low Battery Warnings	
10. Dead Battery Warning & Shutoff	
11. Operating The ToxiRAE Pro LEL	
11.1. Overview	
11.1.1. Normal Mode	
11.1.2. Basic User Mode	
11.1.3. Advanced User Mode	
11.2. Navigation In Normal Mode	
11.2.1. Peak	
11.2.2. Date, Time, And Temperature	
11.2.3. Wireless Settings	
11.2.4. Calibration Gas/Measurement Gas/Correction Factor	
11.2.5. Enter Communications and stop measurement?	
11.3. Programming	
11.4. Entering Programming Mode	
11.4.1. Navigating Programming Menus	
11.5. Programming Menus	
11.5.1. Calibration	
11.5.2. Measurement	
	. 23
11.5.4. Datalog	
11.5.5. Monitor Setup	
11.6. Exit (Exit Programming Mode)	
12. Policy Enforcement	
12.1. Setting Policy Enforcement	
12.1.1. AutoRAE 2 Cradle	
12.1.2. ToxiRAE Pro LEL Desktop Cradle Or Travel Charger	
12.2. Deactivating Policy Enforcement	
12.2.1. AutoRAE 2 Cradle	
12.2.2. ToxiRAE Pro LEL Desktop Cradle Or Travel Charger	
13. Bump Testing & Calibrating The ToxiRAE Pro	
13.1. Bump Testing & Calibrating With An AutoRAE 2 [™]	
13.1.1. Bump (Functional) Testing	. 44

13.2.	Calibration Adapter	44	
13.2.1.	Connecting The Calibration Adapter	45	
13.2.2.	Disconnecting The Calibration Adapter	45	
13.3.	Zero Calibration	46	
13.4.	Span Calibration	47	
13.4.1.	Changing Span Gas Concentration	48	
14. Diagnos	tic Mode		
14.1.	Entering Diagnostic Mode	49	
14.2.	Navigating Diagnostic Mode	49	
14.3.	Exiting Diagnostic Mode	49	
15. Alarm S	ignal Summary	50	
16. Downlo	ading Datalogs And Performing PC-Based		
Instrume	ent Configuration and Firmware Upgrades	51	
17. Mainten	ance		
17.1.	Replacing the ToxiRAE Pro LEL Li-Ion Battery		
17.2.	Proper Battery Disposal	55	
17.3.	Removing And Installing The Rubber Boot	56	
17.4.	Filter Replacement	57	
17.5.	Replacing The Sensor	58	
17.6.	Cleaning The Exterior		
17.6.1.	Ordering Replacement Parts	59	
18. Troubles	shooting	60	
19. Technical Support			
20. RAE Sy	20. RAE Systems Contacts		
21. Appendix A: Regulatory Information 64			



Read Before Operating

This manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions.

CAUTION!

Never operate the monitor when the cover is removed. Remove the monitor top cap, rear cover, or battery only in an area known to be non-hazardous.

The wireless communication for the purpose of instrument readings and alarm status is not covered by the CSA Certification.

RAE Systems AutoRAE 2 Automatic Test And Calibration Station is not covered by the CSA Certification.

CAUTION!

- Refer to RAE Systems Technical Note TN-144 for information on LEL sensor poisoning (available at www.raesystems.com).
- Users are recommended to refer to ISA-RP12.13, Part II-1987 for general information on installation and maintenance of combustible gas detection instruments.

CAUTION!

Extended exposure of a detector element to certain concentrations of combustible gases and air can introduce stress to the element and seriously affect its performance, and therefore that recalibration should be carried out or the sensor replaced, or both, after an alarm due to an indication of a high concentration.

CAUTION!

SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.



Use only RAE Systems lithium-ion battery part number G02-3004-000 (3.7V, 1,800mAh). This instrument has not been tested in an explosive gas/air atmosphere having an oxygen concentration greater than 21%. Substitution of components may impair suitability for intrinsic safety. Replace batteries only in non-hazardous locations.

STATIC HAZARD: Clean only with a damp cloth to avoid damage from electrostatic discharge.

For safety reasons this equipment must be operated and serviced by qualified personnel only. Read and understand this instruction manual completely before operating or servicing.

The monitor should be calibrated every time it does not pass a bump test, but no less frequently than every six months, depending on use and exposure to gas and contamination, and its operational mode.

• Calibration intervals and bump test procedures may vary due to national legislation.

• RAE Systems recommends using RAE calibration gas:

Part number 007-3171-000 - Methane (LEL), 34L Cylinder, Cal Gas and Regulator Kit, which includes:

- Methane, 50% LEL (balance air), 34L cylinder
- Constant-flow CGA-600 regulator with adapter
- Part number 600-0071-000 Methane, 50% LEL (balance air), 34L steel cylinder

CAUTION: ANY RAPID UP-SCALE READING FOLLOWED BY A DECLINING OR ERRATIC READING MAY INDICATE AN EXPLOSIVE CONCENTRATION BEYOND UPPER SCALE LIMIT WHICH MAY BE HAZARDOUS.

CAUTION: HIGH OFF-SCALE READINGS MAY INDICATE AN EXPLOSIVE CONCENTRATION.

CAUTION: BEFORE EACH DAY'S USAGE, SENSITIVITY MUST BE TESTED ON A KNOWN CONCENTRATION OF METHANE GAS EQUIVALENT TO 20 TO 50% OF FULL-SCALE CONCENTRATION. ACCURACY MUST BE WITHIN 0 AND +20% OF ACTUAL. ACCURACY MAY BE CORRECTED BY CALIBRATION PROCEDURE.

Utiliser seulement la batterie Lithium-ion RAE Systems référence G02-3004-000 (3.7V, 1,800mAh). Cet instrument n'a pas été testé dans une atmosphère de gaz/air explosive ayant une concentration d'oxygène plus élevée que 21%. La substitution de composants peut compromettre la sécurité intrinsèque. Ne changer les batteries que dans un emplacement désigné non dangereux.

RISQUE D'ORIGINE ELECTROSTATIQUE: Nettoyer uniquement avec un chiffon humide.

Pour des raisons de sécurité, cet équipement doit être utilisé et entretenu uniquement par un personnel qualifié. Étudier le manuel d'instructions en entier avant d'utiliser, ou d'entretenir l'équipement.

Une vérification d'étalonnage est définie par une exposition du détecteur au gaz d'étalonnage qui doit déclencher le seuil d'alarmes bas.

Les périodes de calibration peuvent varier suivant les législations locales.

RAE Systems préconise d'utiliser les gaz d'étalonnage suivants:

Numéro de pièce 007-3171-000 - Méthane (LIE), Bouteille de 34L, Kit gaz étalon et régulateur, comprenant:

• Méthane, 50% LIE (reste air), bouteille de 34L

• Régulateur à débit constant DGA-600 avec adaptateur

Numéro de pièce 600-0071-000 - Méthane, 50% LIE (reste air), bouteille acier de 34L

ATTENTION: TOUTE AUGMENTATION RAPIDE DE LA LECTURE SUIVIE D'UNE DIMINUTION OU VALEUR ERRATIQUE DE LA MESURE PEUT INDIQUER UNE CONCENTRATION DE GAZ INFLAMMABLE SUPERIEURE A LA LIMITE HAUTE, ENTRAINANT UN DANGER.

ATTENTION: DES LECTURES HAUTES ET HORS D'ECHELLE PEUVENT INDIQUER DES CONCENTRATIONS DE GAZ INFLAMMABLES.

ATTENTION: AVANT CHAQUE UTILISATION JOURNALIERE VERIFIER LA SENSIBILITE AVEC UNE CONCENTRATION CONNUE DE METHANE EQUIVALENTE A 20-50% DE LA PLEINE ECHELLE. LA PRECISION DOIT ETRE COMPRISE ENTRE 0-20% DE LA VALEUR VRAIE ET PEUT ETRE CORRIGEE PARUNE PROCEDURE DIETALONNAGE.

1. General Information

The ToxiRAE Pro LEL is the world's first wireless personal combustible gas monitor. The ToxiRAE Pro LEL takes worker protection to the next level by providing safety professionals wireless access to real-time instrument readings and alarm status from any location for better visibility and faster response. The ToxiRAE Pro LEL promptly detects and accurately monitors explosives and combustibles in concentrations from 0 to 100% of the lower explosive limit (LEL). With an onboard library of 34 correction factors, the ToxiRAE Pro LEL can be programmed to automatically read in % LEL of the specified compound.

Key Features

Wireless¹. Personal. Proven.

- Wireless access to real-time instrument readings and alarm status from any location
- Unmistakable five-way local and remote wireless notification of alarm conditions
- 34 built-in LEL correction factors
- Largest display in its class
- Reliable, rugged, and intrinsically safe
- Continuous datalogging
- Easy to use
- Wireless or non-wireless versions² are available

¹ Wireless functionality is currently offered in North America and Europe. Contact RAE Systems for availability in other regions.

² Wireless versions have a functioning wireless modem and are ready for wireless deployments. "Nonwireless" versions cannot be upgraded to wireless in the future. Additional equipment and/or software licenses may be required to enable remote wireless monitoring and alarm transmission.

2. Specifications

ToxiRAE Pro LEL Specifications

Dimensions 118 mm x 60 mm x 30 mm (4.6* x 2.4* x 1.2*) Weigh 235 gt 8.29 ox) Sensor Catabytic head LFL sensor with 0 to 100% LEL range and 1% LEL resolution, Response time (T ₂₀) < 15 seconds Detectable Gase Combustible gases and vapors from paints, coatings, fuels, degreasers, adhesives, solvents, resins, etchers, inks, pesticides, herbicides, etc., using 34 onboard correction factors Battery Rechargeable Li-ion battery • Operating time > 12 hours (normal operation) • Rechargeable Li-ion battery • Operating time > 12 hours (normal operation) • Rechargeable Li-ion battery • Operating time > 12 hours (normal operation) • Recharge time < 4 hours (trough charging cradle Display Readout Real-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status; wireless on/off and reception quality peak values; calibration and measurement gases; correction factors Keypad 2 buttons for operation and programming Diffusion Calibration Calibration Automatic with AutoRAE 2 Test and Calibration Station or manual Alarm Mode Wireless Responde alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions • Additional diagnostic alarm and thray message for low battery Dotalogging • Continuous Datalogging interval (from 1			ro LEL Specifications	
Sensor Catalytic bead LEL, sensor with 0 to 100% LEL range and 1% LEL resolution Response time (T _{w0}) < 15 seconds Detectable Gases Combustible gases and vapors from paints, coatings, fuels, degreasers, adhesives, solvents, resins, etchers, inks, pesticides, etc., using 34 onboard correction factors Battery Recharge time > 12 hours (normal operation) • Operating time > 12 hours (normal operation) • Recharge time < 4 hours through charging cradle Display Crabinglay with white LED backlighting (activated when monitor is in alarm or with a button press) Display Readout Real-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status, wireless on/off and reception quality; peak values; calibration and measurement gases; correction factors Keypad Diffusion Lators for operation and programming Catalibration Automatic with Auto-RE 2 Test and Calibration Station or manual Alarm Modes Wireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions • Additional diagnostic alarm and display message for low battery Datalogging • Continuous Datalogging with a three-month capacity (at one-minute intervals) • User-configurable datalogging interval (from 1 to 3,600 seconds) Communication • Data download at autoRAE 2 Automated Test and Calibration Station • Wireless Reaper Box Bio feet (Uon meters), typical Box B	Dimensions	118 mm x 60 mm x 30 mm (4.6" x 2.4" x 1.2")		
Response time (T _{s0}) < 15 seconds Detectable Gases Combusible gases and vapors from paints, coatings, fiels, degreasers, adhesives, solvents, resins, etchers; inks, pestidies, herbicides, etc., using 34 onboard correction factors Battery Rechargeable Li-ion battery • Operating time > 12 hours (normal operation) • Recharge time < 4 hours through charging cradle Display Graphical LCD display with white LED backlighting (activated when monitor is in alarm or with a button press) Display Readout Real-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status; wireless on/off and reception quality; peak values; calibration and measurement gases; correction factors Keypad 2 buttons for operation and programming Sampling Diffusion Automatic with AutoRAE 2 Test and Calibration Station or manual Alarm Modes Wireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing) bright red LED), and on-screen indication of alarm conditions • Additional diagnostic alarm and display message for low battery • Ogenation cradle • Data download via AutoRAE 2 Automated Test and Calibration Station • Data download via AutoRAE 2 Automated Test and Calibration Station • User-configurable datalogging interval (from 1 to 3.600 seconds) • Data download via AutoRAE 2 Automated Test and Calibration Station • Wireles	Weight	235g (8.29 oz)		
etchers, ints, "pesticides, herbicides, etc., using 34 onboard correction factors Battery Poperating time > 12 hours (normal operation) Recharge time < 4 hours through charging cradle Oisplay Graphical LCD display with white LED backlighting (activated when monitor is in alarm or with a button press) Display Readout Real-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status; wireless on/off and reception quality; peak values; calibration and measurement gases; correction factors Keypad 2 buttons for operation and programming Sampling Diffusion Calibration Automatic with AutoRAE 2 Test and Calibration Station or manual Alarm Modes Wireless renote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions + Additional diagnostic alarm and display message for low battery battery Datalogging User-configurable datalogging interval (from 1 to 3,600 seconds) Communication User-configurable datalogging interval (from 1 to 3,600 seconds) User-configurable datalogging vite as the subtrave Wireless Areuper Bub data communication exale Download Diffect (Du meters), typical No effect when exposed to 0.43mW/cm ² RF interference (5-watt transmitter at 12") Operating Approval US and Canad US and Canad US and Canad Ex in IIC 14 US and Canad US and Canad Ex in IIC 14 US an	Sensor			
 Operating time > 12 hours (normal operation) Recharge time < 4 hours through charging cradie Graphical LCD display with white LED backlighting (activated when monitor is in alarm or with a button press) Display Readout Real-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status; wireless on/off and reception quality; peak values; calibration and measurement gases; correction factors Keypad 2 buttons for operation and programming Sampling Diffusion Calibration Automatic with AutoRAE 2 Test and Calibration or manual Alarm Modes Wireless remote alarm notification, audible (95d @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions Additional diagnostic alarm and display message for low battery Continuous Datalogging with a three-month capacity (at one-minute intervals) User-configurable datalogging interval (rbm) to 3,600 seconds) Communication Data download via AutoRAE 2 Automated Test and Calibration Station Wireless Returnet ISM license-free bands 300 feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") 4^{et} to 22" F (-20" to 50" C) Temperature Oto 95% relative humidity (non-condensing) IP-65 rating for dust and water ingress protection (validated by an independent test laboratory) Bard Canada Lis on Cl.102 (Sono 54) Lis on Cl.102 (Sono 54) Lis on Cl.102 (Sono 54) Lis on Cl.104 (At Case Control for thinseque/Exia IL CT4 (Case Control for SIRA 10 ATEX (Sinore) (At Case Control for SIRA 10 ATEX (Sinore) (At Case Contr	Detectable Gases			
 Recharge time < 4 hours through charging cradle Graphical LCD display with while LED backlighting (activated when monitor is in alarm or with a button press) Display Readout Real-time reading of % of lower explosive limit (LEL): battery status; datalogging on/off status; wireless on/off and reception quality; peak values; calibration and measurement gases; correction factors Keypad 2 buttons for operation and programming Sampling Diffusion Calibration Automatic with AutoRAE 2 Test and Calibration Station or manual Alarm Modes Wireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions Additional diagnostic alarm and display message for low battery Datalogging Continuous Datalogging with a three-month capacity (at one-minute intervals) User-configurable datalogging interval (from 1 to 3.600 seconds) User a download and instrument set-up on PC Via charging and PC communication eradle Joat download i au tatRAE 2 Automated Test and Calibration Station Wireless Ramg 300 feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") No seffect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") No seffect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") No seffect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") No seffect when exposed to 0.45mW/cm² RF interference (5-watt transmitter at 12") No seffect when exposed to 0.45mW/cm² RF interference (5-watt transmitter at 12")	Battery			
Display or with a button press)Graphical LCD display with white LED backlighting (activated when monitor is in alarm or with a button press)Display Readout a el-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status; wireless on/off and reception quality; peak values; calibration and measurement gases; correction factorsKeypad SamplingDiffusionCalibration Alarm ModesAutomatic with AutoRAE 2 Test and Calibration Station or manualAlarm ModesVireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions - Additional diagnostic alarm and display message for low batteryDataloggingContinuous Datalogging with a three-month capacity (at one-minute intervals) - User-configurable datalogging interval (from 1 to 3,600 seconds)Communication - Data download and instrument set-up on PC via charging and PC communication crafleCommunication Station - Wireless NetworkWireless Reage Wireless Reage300 feet (100 meters), typical - Stat download via AutoRAE 2 Automated Test and Calibration Station - Wireless Reage - 0to 95% relative Humidity (non-condensing)Iterference (5-watt transmitter at 12") - 4° to 22° F (-20° to 50° C -Hazardous Location ApprovalsUS and Canada - Stating for dust and water ingress protection (validated by an independent test laboratory)Hazardous Compliance CeroopanceUS and Canada - Stating for dust and water ingress protection (validated by an independent test laboratory)Hazardous Location ApprovalsUS and Canada - Stating for dust and water ingress protection (validated by an				
or with a button press) Display Readout Real-time reading of % of lower explosive limit (LEL); battery status; datalogging on/off status; wireless conform and programming Sampling Sampling Calibration Automatic with AutoRAE 2 Test and Calibration Station or manual Alarm Modes Wireless remote alarm notification, audible (95BB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarn conditions - Additional diagnostic alarm and display message for low battery Datalogging • Continuous Datalogging with a three-month capacity (at one-minute intervals) - User-configurable datalogging interval (from 1 to 3,600 seconds) Communication • Data download and instrument set-up on PC via charging and PC communication cradle nownload • Data download and instrument set-up on PC via charging and PC communication eradle wireless Requered ISM license-free bands Wireless Rang 00 feet (100 metrs), typical Wireless Rang 00 feet (100 metrs), typical Wireless requered US and Canada Hazardous US and Canada Location Approvals O to 95% relative humidity (non-condensing) Dust and Water IUS and Canada Lis, for CLI Dv 1, Grps A.B,C,D T-Code T4, Class 1, Zone 0	Diaplay			
 status; wireless on/off and reception quality; peak values; calibration and measurement gases; correction factors Keypad buttons for operation and programming Diffusion Calibration Automatic with AutoRAE 2 Test and Calibration Station or manual Alarm Modes Wireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions Additional diagnostic alarm and display message for low battery Octimuous Datalogging with a three-month capacity (at one-minute intervals) User-configurable datalogging interval (from 1 to 3,600 seconds) Communication and bata download and instrument set-up on PC via charging and PC communication cradle Download Data download via AutoRAE 2 Automated Test and Calibration Station Wireless Requeets ISM license-free bands 300 feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") Operating -4° to 22° F (-20° to 50° C) Fargerating Feb Testing for dust and water ingress protection (validated by an independent test laboratory) Bust and Water IB-S5 rating for dust and water ingress protection (validated by an independent test laboratory) Key and Canada Sin (C11 Dv 1, Grps A,B,C,D T-Code T4, Class I, Zone 0 A/Exia IIC T4 Case 2, No.152-M1984 A ANSUISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia Europe ATEX: € 0575 €) II 11G SIRA 10.ATEX 2189X Ex ia IIC T4 Case 2, No 152 ATEX directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 2004/108/EC; R&TTE directive: 1999/5/EC 		or with a button press)		
Sampling CalibrationDiffusionCalibrationAutomatic with AutoRAE 2 Test and Calibration Station or manualAlarm ModesWireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions - Additional diagnostic alarm and display message for low batteryDatalogging• Continuous Datalogging with a three-month capacity (at one-minute intervals) - User-configurable datalogging interval (from 1 to 3,600 seconds)Communication and Data Download• Data download and instrument set-up on PC via charging and PC communication radle Data download via AutoRAE 2 Automated Test and Calibration Station - Wireless data and status transmission via built-in RF modem (optional)Wireless NetworkRAE Systems Dedicated Wireless NetworkWireless Range BM filense-free bands 300 feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") -4° to 22° F (-20° to 50° C)Temperature Humidity 10 to 95% relative humidity (non-condensing)Dust and Water ResistanceIbaratory)US and CanadaLocation ApprovalsUS and CanadaLocation ApprovalsCE compliance Curring Curring Calibration ApprovalsCE compliance Curring Curring Calibration Curring Performance Test Curring Curring Curring Curring Curring Curring Curring Curring Curring Curring Curring <th>Display Readout</th> <th colspan="3">status; wireless on/off and reception quality; peak values; calibration and measurement</th>	Display Readout	status; wireless on/off and reception quality; peak values; calibration and measurement		
CalibrationAutomatic with AutoRAE 2 Test and Calibration Station or manualAlarm ModesWireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs), and on-screen indication of alarm conditions - Additional diagnostic alarm and display message for low batteryDatalogging• Continuous Datalogging with a three-month capacity (at one-minute intervals) • User-configurable datalogging interval (from 1 to 3,600 seconds)Communication 	Keypad	2 buttons for operation	and programming	
Alarm ModesWireless remote alarm notification, audible (95dB @ 30cm), vibration, visible alarm (flashing bright red LEDs.), and on-screen indication of alarm conditions • Additional diagnostic alarm and display message for low batteryDatalogging• Continuous Datalogging with a three-month capacity (at one-minute intervals) • User-configurable datalogging interval (from 1 to 3,600 seconds)Communication and Data and Data Downloal• Data download and instrument set-up on PC via charging and PC communication craditor at utoRAE 2 Automated Test and Calibration Station • Wireless RetworkWireless RetworkRAE Systems Dedicate/ Wireless NetworkWireless Renge Wireless Rafe Temperature HumiditySol feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") • 4° to 22° F (-20° to 50° C)Bust and Water ResistanceUS and Canada Location ApprovalsImmunity (In construction cradition) (Class I, Zone 0 A/Exia IIC T4 C22.2 No.152 MISA ANSUISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia ATEX C 60575 II 11G SIRA 10 ATEX 2189X Ex ia IIC T4 Ga Canada Canada Compliance TestC22.2 No.152 CATEX directive: 94/9/LCPerformance Test Compliance WarrantyC22.2 No.152 ANSUISA-12.13.01Kat IIC T4 C32.2 No.152Performance Test Compliance WarrantyC22.2 No.152 ANSUISA-12.13.01Kat IIC T4 C32.2 No.152Performance Test Ore pear on battery and other consumable componentsC22.2 No.152	Sampling	Diffusion		
(flashing bright red LEDs), and on-screen indication of alarm conditions • Additional diagnostic alarm and display message for low batteryDataloggin (User-configurable datalogging interval (from 1 to 3,600 seconds) • User-configurable datalogging interval (from 1 to 3,600 seconds)Communication and Data Download• Data download and instrument set-up on PC via charging and PC communication https://www.net.org Download• Data download and instrument set-up on PC via charging and PC communication www.net.orgOpenation• Data download and instrument set-up on PC via charging and PC communication www.net.orgWireless NetworkRAE Systems Dedicated Wireless NetworkWireless Range Bodi (for meters)ISM license-free bands S00 feet (100 meters)Operating Temperature HumidityISM license-free bands som of eet (100 meters)Ism license-free bandsDust and Water ResistanceISM license-free bands som of eet (100 meters)Ism license-free bandsHazardous ApprovalsUS and Canada alobaratoryIsm or-condensing)Ism independent testHazardous ApprovalsUS and Canada alobaratoryIsm or-condensing super-sci (Sign (Gas I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984 ANSUISA-12.13.01-2000 SIRA 10 ATEX 2189X Ex ia IIC T4 Ga ATEX directive: 94/JEC; R&TTE directive: 1999/5/ECIsm inter aloba ATEX directive: 94/JEC; R&TTE directive: 1999/5/ECChinaC22.2 No.152 AIEX directive: 94/JEC; R&TTE directive: 1999/5/EC ATEX directive: 94/JEC; R&TTE directive: 1999/5/ECPerformance Tees Compliance Warran	Calibration	Automatic with AutoR.	AE 2 Test and Calibration Station or manual	
 User-configurable datalogging interval (from 1 to 3,600 seconds) Data download and instrument set-up on PC via charging and PC communication cradle Download Data download via AutoRAE 2 Automated Test and Calibration Station Wireless Network RAE Systems Dedicated Wireless Network ISM license-free bands 300 feet (100 metrs), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") -4° to 22° F (-20° to 50° C) Temperature Humidity Dust and Water Hazardous Location Approvals US and Canada Europe ATEX: C 0575 S II 1G SIRA 10 ATEX 2189X Ex i II C T4 Ga China Ex ia IIC T4 Ga China Ex ia IIC T4 Ga Compliance ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components on battery and other consumable components on battery and other consumable components 	Alarm Modes	(flashing bright red LEDs), and on-screen indication of alarm conditions		
and Data Download i Data download via AutoRAE 2 Automated Test and Calibration Station · Wireless Network Wireless Network Wireless Range BM license-free bands 300 feet (100 meters), typical No effect when exposed to 0.43mW/cm ² RF interference (5-watt transmitter at 12") · 4° to 22° F (-20° to 50° C) Temperature Humidity 0 to 95% relative humidity (non-condensing) Dust and Water Resistance Hazardous Location Approvals US and Canada LS. for CI.I Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984 ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia ATEX: © 0575 © 11 IG SIRA 10 ATEX 2189X Ex ia IIC T4 Ga China Ex ia IIC T4 C22.2 No.152 Met directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 949/FC Performance Tes C22.2 No.152 Marranty Warranty Warranty	Datalogging			
Download• Data download via AutoRAE 2 Automated Test and Calibration Station • Wireless data and status transmission via built-in RF modem (optional)Wireless NetworkRAE Systems Dedicated Wireless NetworkWireless Renge Wireless Range BM license-free bands 300 feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") • 4° to 22° F (-20° to 50° C)Operating Temperature Humidity0 to 95% relative humidity (non-condensing) IP-65 rating for dust and water ingress protection (validated by an independent test laboratory)Bust and Water ResistanceUS and CanadaSec 2010 2360054 LS. for CLI Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2.2.No.152-M1984 ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia Intrinsically safe/ Securite Intrinseque/Exia KIRA 10 ATEX 2189X Ex ia IIC T4 Ga ChinaEuropeATEX: C 057 Se II 11G SIRA 10 ATEX 2189X Ex ia IIC T4 C22.2.2.No.152Performance Test Oupgiance WarrautyC22.2.No 152 ANSI/ISA-12.13.01C22.2.No 152 ANSI/ISA-12.13.01Performance Test Oupgiance WarrautyC22.2.No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and on-consumable components One year on battery and on-consumable components	Communication			
 Wireless Network KAE Systems Dedicated Wireless Network KAE Systems Dedicated Wireless Network SM license-free bands SM license-free bands SM license-free bands SM license-free bands SM of eff (100 meters)-ypical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12") A⁴ to 22° F (-20° to 5° C) A⁴ to 22° to 22° to 22° to 2360054 A⁴ to 22° to 22° to 2360054 A⁴ to 22° to 22° to 2360054 A⁴ to 22° to 2360054 A⁴ to 23° to 2360054 A⁴ to 23° to 2360054 A⁴ to 23° to 2360054		communication cradle		
Wireless Frequency Wireless Range EM ImmunityISM license-free bands 300 feet (100 meters), typical 	Download			
Wireless Range EM Immunity300 feet (100 meters), typical No effect when exposed to 0.43mW/cm² RF interference (5-watt transmitter at 12")Operating Temperature Humidity-4° to 22° F (-20° to 50° C)0 to 95% relative humidity (non-condensing)Dust and Water ResistanceHazardous Location ApprovalsUS and CanadaLocation ApprovalsUS and CanadaEuropeEuropeCE Compliance (European Conformity)Performance Test Compliance WarrantyC22.2 No 152 Compliance WarrantyCate Compliance WarrantyCate Compliance WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyCate Construction WarrantyCate Construction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction WarrantyConstruction<	Wireless Network	RAE Systems Dedicate	d Wireless Network	
EM Immunity No effect when exposed to 0.43mW/cm ² RF interference (5-watt transmitter at 12") Operating -4° to 22° F (-20° to 50° C) Humidity 0 to 95% relative humidity (non-condensing) Dust and Water IP-65 rating for dust and water ingress protection (validated by an independent test laboratory) Hazardous Location Approvals US and Canada Europe Image: Securite Intrinsically safe/ Securite Intrinseque/Exia Europe ATEX: C 0575 Image: Image: Securite Intrinseque/Exia CE Compliance EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC Performance Test C22.2 No 152 Varranty C22.2 No 152 Marker on battery and other consumable components Nos/ISA-12.13.01				
Operating Temperature Humidity-4° to 22° F (-20° to 50° C)0 to 95% relative humidity (non-condensing)Dust and Water ResistanceHazardous Location ApprovalsUS and CanadaLocation ApprovalsUS and CanadaLocation ApprovalsLocation ApprovalsCE Compliance (European Conformity)CE Compliance Temperature WarrantyCE Compliance Temperature WarrantyCE compliance (EuropeCE compliance (Europe and Canada China Ex ia IIC T4 EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 94/9/ECPerformance Test WarrantyCurrent WarrantyCanadaCanadaCanadaCanadaCanadaCe compliance WarrantyCe compliance Year on battery and other consumable components One year on battery and other consumable components	6			
Temperature Humidity0 to 95% relative humidity (non-condensing)Dust and Water ResistanceIP-65 rating for dust and water ingress protection (validated by an independent test laboratory)Hazardous Location ApprovalsUS and Canada \textcircled{O} = 2010 2360054 I.S. for Cl.I Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984 ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia EuropeEuropeATEX: \textcircled{O} 5057 \textcircled{O} II 1G SIRA 10 ATEX 2189X Ex ia IIC T4 EX ia IIC T4 C22.2 No.152Performance Test Compliance WarrantyC22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components	-			
Humidity0 to 95% relative humidity (non-condensing)Dust and Water ResistanceIP-65 rating for dust and water ingress protection (validated by an independent test laboratory)Hazardous Location ApprovalsUS and CanadaImage: Security of the security o		1 10 22 1 (20 10 50	0,	
Resistancelaboratory)Hazardous Location ApprovalsUS and CanadaUS and Canada $\bigcirc 2010 2360054$ I.S. for CLI Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984EuropeATEX: SIRA 10 ATEX 2189X Ex ia IIC T4 Ga Cast in IIC T4CE Compliance (European Conformity)EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 94/9/ECPerformance Test Compliance WarrantyC22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components		0 to 95% relative humic	dity (non-condensing)	
Hazardous Location ApprovalsUS and CanadaImage: Solution 2360054 LS. for CLI Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia ATEX: Image: Solution of the solution o	Dust and Water		d water ingress protection (validated by an independent test	
Location ApprovalsI.S. for Cl.I Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984ApprovalsClass I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984EuropeATEX: < 0575 < II 1G SIRA 10 ATEX 2189X Ex ia IIC T4 GaCE Compliance (European Conformity)EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 94/9/ECPerformance Test Compliance WarrantyC22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components	Resistance	laboratory)		
Location ApprovalsI.S. for Cl.I Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984ApprovalsClass I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984EuropeATEX: < 0575 < II 1G SIRA 10 ATEX 2189X Ex ia IIC T4 GaCE Compliance (European Conformity)EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 94/9/ECPerformance Test Compliance WarrantyC22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components			() 2010 2260054	
ApprovalsClass I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia ATEX: C 0575 (x) II 1G SIRA 10 ATEX 2189X Ex ia IIC T4 GaCE Compliance (European Conformity)ChinaEx ia IIC T4 EX ia IIC T4 EX ia IIC T4 EX ia IIC T4 EX ia IIC T4 C22.2 No.152Performance Test (Warranty)C22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery article components		US and Canada	LS for CLLDv 1 Grps A B C D T-Code T4	
C22.2 No.152-M1984 ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia ATEX: C 0575 x II 1G SIRA 10 ATEX 2189X Ex ia IIC T4 Ga China Ex ia IIC T4 CE Compliance (European Conformity) Performance Test COmpliance Warranty Warranty C22.2 No.152-M1984 ANSI/ISA-12.13.01 C22.2 No.152-M1984 ANSI/ISA-12.13.01 COMPLEX COMPLEX C22.2 No.152-M1984 ANSI/ISA-12.13.01 COMPLEX C22.2 No.152-M1984 ANSI/ISA-12.13.01 C22.2 No.152-M1984 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components				
Europe ATEX: € 0575 € II 1G SIRA 10 ATEX 2189X Ex ia IIC T4 Ga China Ex ia IIC T4 Ga China Ex ia IIC T4 EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 94/9/EC Performance Test Compliance Warranty C22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components	II ·····			
SIRA 10 ATEX 2189X Ex ia IIC T4 Ga China Ex ia IIC T4 Ga EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC (European Conformity) ATEX directive: 94/9/EC Performance Test Compliance C22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components		_		
Ex ia IIC T4 GaCE ComplianceEMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC(European Conformity)EMC directive: 94/9/ECPerformance TestC22.2 No 152ANSI/ISA-12.13.01Two years on LEL sensor and non-consumable components One year on battery and other consumable components		Europe		
ChinaEx ia IIC T4CE ComplianceEMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC(European Conformity)C22.2 No 152Performance Test ComplianceC22.2 No 152NSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components				
CE Compliance (European Conformity)EMC directive: 2004/108/EC; R&TTE directive: 1999/5/EC ATEX directive: 94/9/ECPerformance Test Compliance WarrantyC22.2 No 152 ANSI/ISA-12.13.01 Two years on LEL sensor and non-consumable components One year on battery and other consumable components		China		
(European Conformity)ATEX directive: 94/9/ECPerformance TestC22.2 No 152ComplianceANSI/ISA-12.13.01WarrantyTwo years on LEL sensor and non-consumable components One year on battery and other consumable components	CE Compliance			
ComplianceANSI/ISA-12.13.01WarrantyTwo years on LEL sensor and non-consumable components One year on battery and other consumable components				
Warranty Two years on LEL sensor and non-consumable components One year on battery and other consumable components	Performance Test	C22.2 No 152		
One year on battery and other consumable components				
	Warranty			
	Spacifications are ant		i oner consumable components	

Specifications are subject to change.

3. Overview


The ToxiRAE Pro LEL is the world's first wireless personal combustible gas monitor. The ToxiRAE Pro LEL takes worker protection to the next level by providing safety professionals wireless access to real-time instrument readings and alarm status from any location for better visibility and faster response. The ToxiRAE Pro LEL promptly detects and accurately monitors explosives and combustibles in concentrations from 0 to 100% of the lower explosive limit (LEL). With an onboard library of 34 correction factors, the ToxiRAE Pro LEL can be programmed to automatically read in % LEL of the specified compound.

LEL Gross-Sensitivity		
Compound	LEL Relative Sensitivity	LEL CF
Methane	100	1.0
Propane	62	1.6
Propene	67	1.5
n-Butane	50	2.0
Isobutylene	67	1.5
n-Pentane	45	2.2
n-Hexane	43	2.3
Cyclohexane	40	2.5
Benzene	45	2.2
Toluene	38	2.6
n-Heptane	42	2.4
n-Octane	34	2.9
Turpentine	34	2.9
Leaded Gasoline	48	2.1
Methanol	67	1.5
Ethanol	59	1.7
Isopropanol	38	2.6
Acetone	45	2.2
Methyl Ethyl	38	2.6
Ketone		
Ethyl Acetate	45	2.2
Carbon Monoxide	75	1.2
Hydrogen	91	1.1
Ammonia	125	0.80
Phosphine	385	0.26

LEL Cross-Sensitivity


4. User Interface

The ToxiRAE Pro LEL's user interface consists of the display, four LEDs, an alarm buzzer, and two keys, [MODE] and [Y/+]. The LCD displays real-time readings in specified measurement units, sensor type, alarm type (when in alarm, including cal. overdue), battery status, datalog (if on), and radio and connection quality (if available).

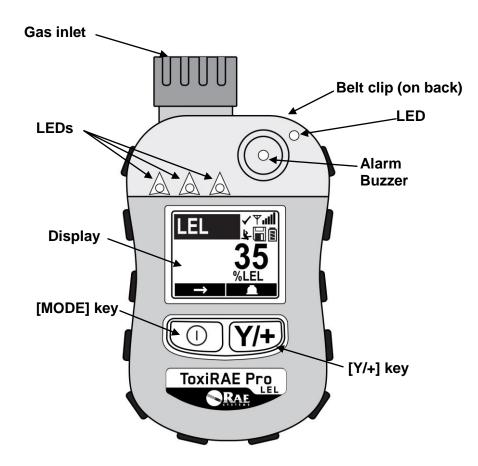

4.1. Display Overview

The LCD display provides visual feedback that includes the sensor types, readings, time, battery condition, and other functions.

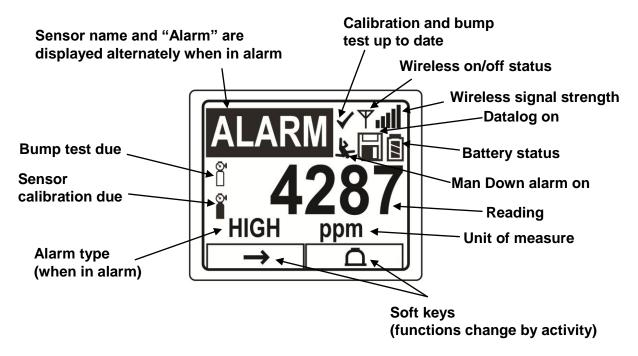


4.2. Status Indicator Icons

Along the top of most screens are status indicators that tell you whether a function is operating and/or its strength or level.

lcon	Function
Ψ	Wireless status: the radio is on
Ψx	Wireless status: the radio is off
	The instrument is not equipped with a radio (no icon)
الد.	Wireless strength (0 to 5 bars), only when radio is turned on
H	Datalogging status (shown when datalogging is on, blank when off)
	Battery status (three segments show battery charge level)
¥.	Man Down alarm enabled
Î	Sensor calibration due
Ø	Bump test due
1	All sensors tested and calibrated tick mark (all sensors have been bump tested and calibrated; no sensor is overdue for a bump test or calibration according to the intervals configured on the instrument

5. Charging The ToxiRAE Pro LEL

Always fully charge the battery before using the ToxiRAE Pro LEL. The ToxiRAE Pro LEL's Li-ion battery is charged by placing the ToxiRAE Pro LEL in its cradle. Contacts on the bottom of the ToxiRAE Pro LEL meet the cradle's contact pins, transferring power.

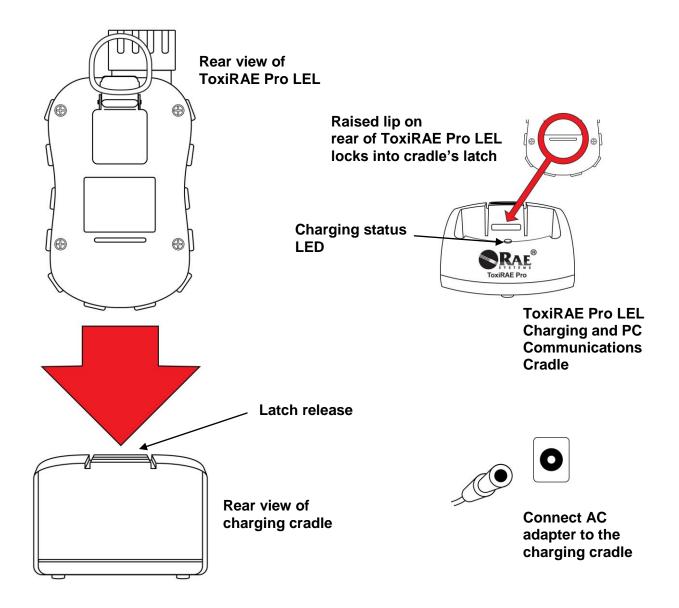

Note: Before setting the ToxiRAE Pro LEL into its charging cradle, visually inspect the contacts to make sure they are clean. If they are not, wipe them with a soft, dry cloth. Do not use solvents or cleaners.

Follow this procedure to charge the ToxiRAE Pro LEL:

- 1. Plug the AC/DC adapter into the ToxiRAE Pro LEL's cradle.
- 2. Plug the AC/DC adapter into the wall outlet.
- 3. Place the ToxiRAE Pro LEL into the cradle and press down until it is locked in place and the LED glows.


The ToxiRAE Pro LEL begins charging automatically. The LED in the cradle should glow red to indicate charging. When charging is complete, the LED in the cradle glows green.

WARNING!

To reduce the risk of ignition of hazardous atmospheres, recharge the instrument only in areas known to be non-hazardous. Remove and replace batteries only in areas known to be non-hazardous.

5.1. Removing The ToxiRAE Pro LEL From The Charging Cradle

To remove the ToxiRAE Pro LEL from its charging cradle, press down on the latch release on the back of the charging cradle while slightly tilting the ToxiRAE Pro LEL toward the front of the cradle, and lift it out.

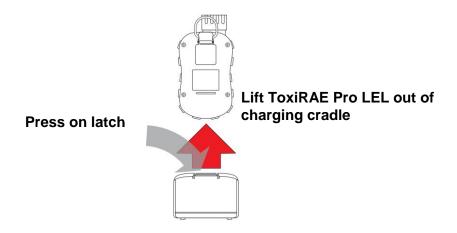

5.2. Low Voltage Shutoff

When the battery's charge falls below the shutoff voltage, the ToxiRAE Pro LEL then turns itself off. Recharge the battery by placing the ToxiRAE Pro LEL in its cradle (the cradle should be connected to the AC adapter).

6. Turning The ToxiRAE Pro LEL On

To turn the ToxiRAE Pro LEL on, press and hold [MODE] for 3 seconds.

Caution: The alarm buzzer is very loud. During startup, you can mute most of the sound by holding a finger over the alarm buzzer port.

Note: Never put tape over the alarm buzzer port to permanently mute it or otherwise limit the loudness of the buzzer.

- 1. When the ToxiRAE Pro LEL turns on, the buzzer, vibration alarm, and LEDs are tested. The firmware version is shown in the display (for example, "V1.00" indicates firmware version 1.00).
- 2. A battery test is performed. If the battery has sufficient charge, then the next step is a self test of the system.

Note: If the battery is almost fully discharged, the message "Battery too low! Needs charging. Powering off!" shows in the display and the ToxiRAE Pro LEL shuts off. You must charge the battery before you can use the instrument.

3. Self-testing is performed by the ToxiRAE Pro LEL.

Note: If one of the following error messages is displayed, shut off the ToxiRAE Pro LEL by pressing [MODE]:

- Sensor error!
- Wrong sensor!

If any of the following error messages occurs, you can either shut off the instrument by pressing [MODE], or continue to the next startup test by pressing [Y/+]:

- Real time clock error!
- Memory error!
- Sensor changed!

For any of these error types, try restarting the instrument. If the error message appears again after five more attempts to restart the instrument, consult the distributor from whom the instrument was purchased for technical support.

- 4. After self-testing, two start-up options are available for the ToxiRAE Pro LEL: Normal and Fast Start-up. The following information is displayed in sequence under Normal Start-up and skipped under Fast Start-up:
 - Sensor type
 - Sensor serial number
 - Date, time, and temperature
 - Calibration gas
 - Last calibration date
 - Measurement gas
 - Correction Factor
 - User mode
 - Battery type, voltage, and shutoff voltage
 - Alarm mode
 - Buzzer enabled/disabled status
 - Light enabled/disabled status
 - Vibration alarm enabled/disabled status
 - Alarm settings for High and Low
 - Datalog type and interval
- 5. Once the startup process is complete, a sensor warm-up screen is shown (with countdown). Then the main measurement screen is shown. The type of monitored hazard is displayed, with the current reading. The ToxiRAE Pro LEL is now ready for use.

7. Turning The ToxiRAE Pro LEL Off

Press and hold [MODE]. In 2 seconds, a 5-second countdown to shutoff begins, accompanied by one buzzer beep per second. You must hold your finger on the key for the entire shutoff process. If you remove your finger from the key during the countdown, the shutoff operation is canceled and the ToxiRAE Pro LEL continues normal operation.

When you see "Unit Off," release your finger from the [MODE] key. The ToxiRAE Pro LEL is now off.

8. Testing The Alarms (Manually)

Under normal non-alarm conditions, the buzzer, vibration alarm, and LEDs can be tested at any time by pressing and holding [Y/+].

Important! If any of the alarms does not respond to this test, check the Alarm Settings. It is possible that any or all of the alarms have been turned off. If all the alarms are turned on, but one or more of them (buzzer, LED lights, or vibration alarm) does not respond to this test, do not use the instrument; contact your RAE Systems distributor for technical support.

9. Low Battery Warnings

If, during operation, the battery's charge is low, the battery icon in the display screen turns empty and blinks once every second. At the same time, the following notifications occur every minute: the buzzer beeps and LEDs blink once, followed by a vibration and a screen message "Battery low! Shut off in X minutes." The countdown to shutoff starts 10 minutes prior to automatic shutoff.

10. Dead Battery Warning & Shutoff

If you turn on the ToxiRAE Pro LEL and the battery's charge is below its lowest threshold, the display shows this message:

Battery too low! Needs charging. Powering off!

It then automatically shuts off. You must charge the ToxiRAE Pro LEL's battery before you can continue to use this instrument.

Important! Do not operate the ToxiRAE Pro LEL again until its battery has been charged.

WARNING!

To reduce the risk of ignition of hazardous atmospheres, charge the battery only in areas known to be non-hazardous.

11. Operating The ToxiRAE Pro LEL

11.1. Overview

The ToxiRAE Pro LEL has two operational modes:

- Normal see page 16 for detailed instructions.
- **Diagnostic** see page 49 for detailed instructions.

The following is an overview of the two modes:

Normal Mode is the default mode. It is accessed when you turn on the ToxiRAE Pro LEL. Two sub-modes are available: Basic User and Advanced User. In Basic User, some restrictions are applied, including password protection that guards against entering Programming Mode by unauthorized personnel. In Advanced, there are no such access restrictions (you do not need a password), and it provides the indications and data you need most for typical monitoring applications.

Diagnostic Mode is primarily intended for technicians to use during troubleshooting, although it also offers access to a few changeable parameters that you may rarely (if ever) need to change. A password is required to enter Diagnostic Mode (the password is the same as (and automatically kept in sync with) the one used to enter Programming Mode). The default password is 0000. To enter Diagnostic Mode, power the instrument off and then turn it back on by pressing and holding both the buttons. In Diagnostic Mode, ToxiRAE Pro LEL displays readings in raw counts instead of units such as %LEL.


It is not possible to switch to Programming from Diagnostic Mode without turning off the instrument first and then restarting it in the desired mode.

11.1.1. Normal Mode

Normal Mode is the default mode of the ToxiRAE Pro LEL when it is turned on. The selected sub-mode (Basic or Advanced) determines the number of screens that are accessible.

11.1.2. Basic User Mode

When the ToxiRAE Pro LEL is in Basic User Mode, pressing [MODE] allows you to step through the screens in the following fashion:

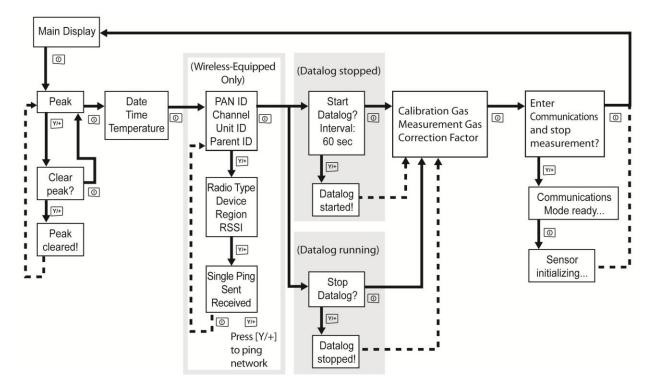

Note: The gray boxes indicate the datalog functions when datalogging is in Manual mode. When datalogging is in Automatic mode, these screens do not appear. Refer to page 27 for information on selecting Automatic or Manual datalogging.


11.1.3. Advanced User Mode

Note: To enter Advanced User mode from Basic User mode, you must enter Programming mode on an instrument that is running in Basic User mode by simultaneously pressing and holding both the buttons for 3 seconds and supply a password.

To exit Programming Menu and return to the measurement screen (in Advanced User mode), press the [MODE] button repeatedly to highlight the Exit icon in Programming Menu and press [Y/+] to exit to the measurement screen.

When the ToxiRAE Pro LEL is in Advanced User mode, pressing [MODE] steps through the same screens, but with the addition of a screen that allows for selection of different measurement gases from the internal library. Also, once in Advanced User mode, you may enter Programming without using a password.

Note: In Advanced User Mode, you may select different measurement gases from the internal library.

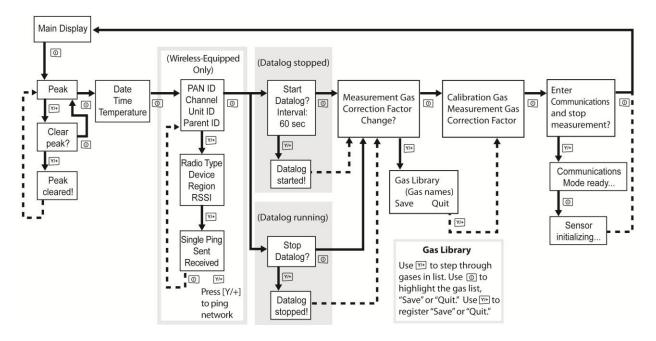

Note: The gray box indicates the datalog functions when datalogging is in Manual mode. When datalogging is in Automatic mode, these screens do not appear. Refer to page 27 for information on selecting Automatic or Manual datalogging.

11.2. Navigation In Normal Mode

Step through the screens in Normal Mode by pressing [MODE]. Some screens allow actions on your part, such as clearing the data. In these instances, pressing [Y/+] performs the action.

11.2.1. Peak

The first screen includes a readout for Peak readings.

PeakThe Peak value tells you the highest reading for the sensor since the ToxiRAEPro LEL was turned on. Press [Y/+] twice to clear the Peak value.

Note: If you do not press a key within 1 minute, the display reverts to the normal reading.

Press [MODE] to advance from screen to screen.

11.2.2. Date, Time, And Temperature

The current Date is expressed as Month/Day/Year, with two digits for month and day, and four digits for the year. Below the date is the time, which is expressed as Hours/Minutes/Seconds, with two digits for each. The time is in 24-hour (military) format. Below the time is the internal temperature, which can be in degrees Fahrenheit or Celsius (settable in Programming Mode).

11.2.3. Wireless Settings

The current wireless settings are shown here. These include the PAN ID, Channel, and Unit ID, which are helpful when creating or troubleshooting networks. Parent ID data does not apply.

11.2.4. Calibration Gas/Measurement Gas/Correction Factor

This screen shows calibration gas (Cal. Gas) and its concentration, measurement gas (Meas. Gas), and correction factor (CF).

11.2.5. Enter Communications and stop measurement?


Before communicating with a PC running ProRAE Studio II Instrument Configuration and Data Management software (for downloading datalogs, configuring the instrument, or uploading new firmware), the ToxiRAE Pro LEL must be set to communicate with the computer. Press [MODE] repeatedly until you reach the "Enter Communications and stop measurement?" screen. Then press [Y/+]. Measurement and datalogging are stopped, and the instrument is now ready to communicate with the PC.

11.3. Programming

You must provide a 4-digit password to enter Programming Mode, unless the ToxiRAE Pro LEL is already running in Advanced User mode. The default password is 0000.

11.4. Entering Programming Mode

1. Press and hold [MODE] and [Y/+] simultaneously until the Password screen appears.

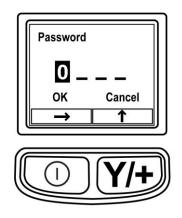


- 2. Input the 4-digit password:
 - Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
 - Step from digit to digit using [MODE].
 - When you are done, continue pressing [MODE] until OK or Cancel is highlighted.
 - Press [Y/+] to register the password (if OK is highlighted) or to exit without entering the password (if Cancel is selected)

If you make a mistake, you can cycle through the digits by pressing [MODE] repeatedly and then using [Y/+] to change the number in each position.


Note: The default password is 0000.

When you have successfully entered Programming Mode, the following screen appears:

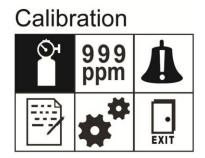

Note: The password can only be changed by connecting the instrument to a PC running ProRAE Studio II software. Follow the instructions in ProRAE Studio II to change it.

The Calibration icon is highlighted first by default, but you can press [MODE] to step from one programming menu item to the next, with the name of the menu shown at the top of the display and the corresponding icon highlighted. As you repeatedly press [MODE], the selection moves from left to right, and the following screens appear in sequence:

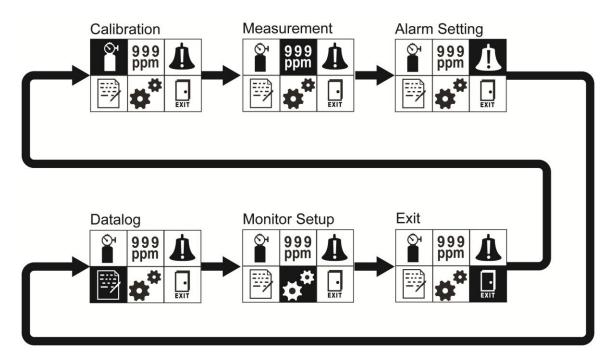

Note: When you reach Exit and press [MODE], the menu cycles back to Calibration.

To exit the Programming Menu, highlight Exit by pressing the [MODE] button, and press the [Y/+] key

11.4.1. Navigating Programming Menus

Navigating through the Programming menus is easy and consistent, using a single interface format of a "forward arrow" and "Select," controlled by the [MODE] key and [Y/+] key, respectively.

In the submenus, the functions of a "down arrow" and "Select" are controlled by the [MODE] key and [Y/+] key, respectively.

Also in submenus, the functions of the keys may correspond to the instruction directly above each key. Therefore, if it says "OK" above the [MODE] key, pressing [MODE] selects "OK." When setting numerical data, the [MODE] key typically selects which digit is highlighted, while each press of [Y/+] increases the digit by 1.

11.5. Programming Menus

Programming allows anyone with the password to change the instrument's settings, calibrate the instrument, enter user information, etc. Programming has five menus. Each menu includes several submenus to perform additional programming functions.

This table shows the menus (and their icons) and submenus:

	999 ppm			
Calibration	Measurement	Alarm Setting	Datalog	Monitor Setup
Zero Calibration	Meas. Gas	High Alarm	Clear Datalog	Wireless
Span Calibration		Low Alarm	Interval	Site ID
		Alarm Mode	Data Selection	User ID
		Buzzer & Light	Datalog Type	User Mode
		Man Down Alarm		Date
				Time
				Temp. Unit
				Language
				Zero At Start
				LCD Contrast

Note: There is also an "Exit" icon. It has only one function. When you select it, the instrument exits Programming Mode, updates the settings, and returns to monitoring.

Once you enter Programming, the LCD displays the first menu, Calibration. Each subsequent menu is accessed by pressing [MODE] repeatedly until the desired menu is displayed. To enter a submenu of a menu, press [Y/+].

11.5.1. Calibration

Two types of calibration are available: Zero (fresh air) and Span.

In the Calibration submenu, select Zero or Span Calibration by pressing [MODE]. Once your choice is highlighted, press [Y/+].

Zero Calib

The procedure for performing a zero calibration is covered on page 36.

Span Calib

The procedure for performing a basic span calibration is covered on page 47.

Exit

Press [Y/+] to exit. Calibration is exited, and Measurement is highlighted in the Programming Menu screen.

11.5.2. Measurement

The submenu for Measurement is Measurement Gas.

Meas Gas

Measurement gases are organized in a list called Gas Library:

The Gas Library consists of 34 compounds found in RAE Systems' Technical Note TN-156 (available online at www.raesystems.com).

- 1. Scroll through the Gas Library by pressing [Y/+] until you find the gas you want as your measurement gas.
- 2. When you are on the gas of your choice, press [MODE] to highlight "Save."
- 3. To save your choice, press [Y/+]. Otherwise, press [MODE] to highlight "Quit," followed by [Y/+]; the newly selected gas will not be saved.

Exit

Press [Y/+] to exit. Measurement is exited, and Alarm Setting is highlighted in the Programming Menu screen.

11.5.3. Alarm Setting

High Alarm

Set the High Alarm as follows:

- 1. In the High Alarm submenu, press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 2. Press [MODE] to move to the next digit.
- 3. When you are satisfied with the number, press [MODE] until "OK" is highlighted.
- 4. To save the new value, press [Y/+]. The value is saved, and the menu advances to Low Alarm.

To exit without saving the new value:

- 1. Press [MODE] to advance to Cancel.
- 2. Press [Y/+] to exit the High Alarm submenu and advance to the Low Alarm submenu.

Low Alarm

Set the Low Alarm as follows:

- 1. In the Low Alarm submenu, press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 2. Press [MODE] to move to the next digit.
- 3. When you are satisfied with the number, press [MODE] until "OK" is highlighted.
- 4. To save the new value, press [Y/+]. The value is saved, and the menu advances to the Alarm Mode submenu.

To exit without saving the new value:

- 1. Press [MODE] to advance to Cancel.
- 2. Press [Y/+] to exit the Low Alarm submenu and advance to the Alarm Mode submenu.

Alarm Mode

There are two selectable alarm types:

Auto Reset	When an alarm is triggered and after the alarm condition is no longer present, the alarm stops and resets by itself.
Latch	When the alarm is triggered, it will not cease until you manually turn it off.
	The latched setting controls alarms for High Alarm and Low Alarm.
	Note: To clear an alarm when the instrument is set to "Latched," press $[Y/+]$ when the main (measurement) display is shown.
1. Press [MODE	[] to step from one alarm type to the other.

- 2. Press [Y/+] to select an alarm type.
- 3. When you have completed your selection, press [MODE] until "Exit" is highlighted. Then press [Y/+] to save the change and exit to "Buzzer and Light."

Buzzer & Light

The buzzer, light, and vibration alarms can be programmed so that any combination, all, or none of them are activated when the ToxiRAE Pro LEL goes into alarm.

Important! If you program the ToxiRAE Pro LEL so that no alarms are activated in an alarm condition, you may put yourself or your workers at risk of being exposed to a hazardous atmosphere and being unaware of it, as the indication of a dangerous condition will be limited to the concentration shown in the display and the name of the type of alarm flashing on the display.

- 1. Choose an alarm combination setting by pressing [MODE] until your choice is highlighted.
- 2. Press [Y/+] to select it.
- 3. Press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to register your selection and exit.

To exit without saving the new value:

- 1. Make sure your previous setting is selected.
- 2. Press [MODE] repeatedly to advance to Exit.
- 3. Press [Y/+] to exit.

Man Down Alarm

The Man Down Alarm is a critical and potentially lifesaving safety feature of every ToxiRAE Pro LEL. The Man Down Alarm is based on the premise that if the instrument is motionless when it is not supposed to be, something wrong may be happening to its user. If that is the case, the ToxiRAE Pro LEL not only goes into alarm locally on the instrument, but also remotely, over the RAE Systems Dedicated Wireless Network, to notify people in the vicinity, as well as remote safety officers at a command center, that a person is down, so that help can be dispatched quickly.

Whenever the Man Down feature is on, the main screen displays a Man Down icon along the top to indicate it is active:



When the Man Down feature is on and there is no gas alarm, the ToxiRAE Pro LEL senses that it is motionless for the amount of time set in the "Motionless Time" parameter. If the instrument is not moved during that time, then a pre-alarm is activated to alert the user, and shows the "Are You OK?" screen. Pressing [Y/+] clears the alarm and returns the ToxiRAE Pro LEL to its normal operation. Pressing [MODE] sets it into Man Down Alarm (and if wireless connectivity is enabled, a Man Down message is sent in real time to remote observers). If neither key is pressed, then after the countdown, it goes into Man Down Alarm (again sending a message to remote observers if wirelessly enabled).



Settings are available for:

- Off/On
- Motionless Time (time the instrument is motionless before initiating a pre-alarm)
- Sensitivity (set to low, medium, or high to compensate for ambient vibration or motion)
- Warning Time (countdown, in seconds, from pre-alarm to Man Down alarm)

When the Man Down alarm is activated, the buzzer sounds and LEDs flash continuously, and a countdown begins.

- If the ToxiRAE Pro LEL's user presses [Y/+] for "Yes" in response to the "Are You OK?" question on the screen before the countdown reaches zero, the Man Down alarm stops and the main reading screen is displayed.
- If the person does not press [Y/+] for "Yes" in response to the "Are You OK?" question on the screen before the countdown reaches zero, the Man Down alarm is sounded and LEDs flash continuously.
- If the person presses [MODE] during the countdown, answering the "Are You OK?" question with "No," the Man Down alarm starts.

If the ToxiRAE Pro LEL's wireless connectivity is enabled, a Man Down message is also sent to remote observers.

Exit (the Alarm Settings Submenu)

Press [Y/+] to exit the Alarm Settings submenu. Alarm Settings is exited, and Datalog is highlighted.

If you want to cycle through the Alarm Setting submenus, press [MODE] instead of [Y/+].

Exit (the Alarm Settings Submenu)

Press [Y/+] to exit the Alarm Settings submenu. Alarm Settings is exited, and Datalog is highlighted.

If you want to cycle through the Alarm Setting submenus, press [MODE] instead of [Y/+].

11.5.4. Datalog

Clear Datalog

This operation erases all data stored in the datalog.

Note: Once the datalog is cleared, the data cannot be recovered.

Press [Y/+] to clear the datalog. The display asks, "Are you sure?"

- Press [Y/+] if you want to clear the datalog. When it has been cleared, the display shows "Datalog Cleared!"
- Press [MODE] if you do not want to clear the datalog.

You are taken to the next submenu, Interval.

Interval

Intervals are shown in seconds. The default value is 60 seconds. The maximum interval is 3600 seconds, and the minimum is 1 second.

- 1. Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 2. Press [MODE] to advance to the next digit.
- 3. Repeat this process until the desired value is entered.

When you have completed your selections, press [MODE] repeatedly until "OK" is highlighted.

- To save the new value, press [Y/+].
- To cancel the changes and keep the settings as they were, press [MODE] to highlight "Cancel." Then press [Y/+].

You are taken to the next submenu, Data Selection.

Data Selection

Data Selection allows you to select which types of data are recorded and made available when you download your datalog to a computer via ProRAE Studio II software.

You can choose any or all of four types of data (you must choose at least one):

- Minimum
- Average
- Maximum
- Real Time
- 1. Press [MODE] to step from one option to the next. The highlighter indicates your choice.

- 2. Press [Y/+] to toggle your selection on or off (the check box indicates "on" with an "X").
- 3. When you have completed your selections, press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to save the changes and exit.

Datalog Type

The instrument has two datalog types:

Auto	Collects datalog information when the instrument is sampling until the
	datalog memory is full.
Manual	Datalogging occurs only when you manually initiate datalogging (see below for details).

- 1. Press [MODE] to step from one option to the next.
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates that an option has been selected).
- 3. When you have completed your selection, press [MODE] until "Exit" is highlighted.
- 4. Press [Y/+] to save your selection and exit.

About Manual Datalog

When the instrument is set to Manual Datalog, you can turn datalogging on and off from the main measurement display in the Normal Mode by pressing the [MODE] key three times.

- When you reach the screen that says "Start Datalog?" press [Y/+] to start it. You see "Datalog Started," confirming that datalogging is now on.
- When you reach the screen that says "Stop Datalog?" press [Y/+] to stop it. You see "Datalog Stopped," confirming that datalogging is now off.

Exit (the Datalog Submenu)

Press [Y/+] to exit. Datalog is exited, and Monitor Setup is highlighted.

11.5.5. Monitor Setup

Wireless

There are seven Wireless parameters:

- Radio On/Off
- PAN ID
- Channel
- Join Network
- Interval
- Off Network Alarm
- Factory Reset

Radio On/Off This turns the wireless modem on or off.

Note: Turning the radio off does not change any of the settings. They are stored and ready for use the next time the wireless modem is turned on.

- 1. Choose an "On" or "Off" by pressing [MODE] until your choice is highlighted. (the dark circle in the "radio button" indicates that an option has been selected).
- 2. Press [Y/+] to select it.
- 3. Press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to register your selection and exit.

To exit without saving the new value:

- 1. Make sure your previous setting is selected.
- 2. Press [MODE] repeatedly to advance to Exit.
- 3. Press [Y/+] to exit.
- **PAN ID** All units on a network must be programmed with the same Pan ID (Personal Network Identifier) to ensure communication compatibility.

Important! The allowed range for Pan ID numbers is 001 through 999.

Choose and enter a 3-digit PAN ID:

- 1. Press [Y/+] and the display shows the current PAN ID. Example: "866." The left-most digit is highlighted.
- 2. Press [Y/+] repeatedly to select a desired number. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 3. Press [MODE] to advance to the next digit.

Repeat this process until all characters of the new PAN ID are entered.

To save your new PAN ID and exit, press [MODE] repeatedly until "OK" is highlighted. Then press [Y/+]. It says, "Applying settings..." and then "Settings applied successfully!" to indicate they have been registered. The menu now advances automatically to "Channel."

Channel Every network operates on its own channel, between 01 and 10 (do not use 00). If you need to know the network's channel, check the EchoView Host's setting. Note: In Europe, only Channel 00 can be used, and it is preset (it cannot be changed).

Choose and enter a 2-digit Channel:

- 1. Press [Y/+] and the display shows the current Channel. Example: "10." The left-most digit is highlighted.
- 2. Press [Y/+] repeatedly to select a desired number. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 3. Press [MODE] to advance to the next digit.

Repeat this process until all characters of the new Channel are entered.

To save your new Channel number and exit, press [MODE] repeatedly until "OK" is highlighted. Then press [Y/+]. It says, "Applying settings..." and then "Settings applied successfully!" to indicate they have been registered. The menu now advances automatically to "Join Network."

Join Network This screen is for joining an existing network. When you see this screen, press [Y/+] to join, or [MODE] to exit without joining.

While searching for the network, the message "Joining network..." is displayed.

If the network is found and successfully joined, then "Join network successful!" is displayed. Press [MODE] to acknowledge the connection and return to the Wireless menu.

If the network is not joined, the display shows: "Join network failed!" You have two options: Exit and Retry. If you want to retry, check that your network setting is correct (matches the EchoView Host) and that the EchoView Host is turned on and operating. Then press [Y/+] to retry.

Interval This sets the amount of time between data transmissions to the EchoView Host.

To change the Interval:

- 1. Press [MODE] to step from one option to the other. The highlighted option changes each time you press [MODE].
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates the option has been selected).
- 3. When you have completed your selection, press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to save your selection, exit the Interval menu, and advance to "Off Netwk Alarm."

Off Netwk Alarm When this is enabled, the unit goes into alarm whenever an active network connection is lost. This informs you that connectivity has been broken between the ToxiRAE Pro and the EchoView Host.

- 1. Choose "On" or "Off" by pressing [MODE] until your choice is highlighted. (the dark circle in the "radio button" indicates that an option has been selected).
- 2. Press [Y/+] to select it.
- 3. Press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to register your selection and exit.

To exit without saving the new value:

- 1. Make sure your previous setting is selected.
- 2. Press [MODE] repeatedly to advance to Exit.
- 3. Press [Y/+] to exit.

Factory Reset	Selecting this resets the wireless settings to their original factory
	configurations.

- **CAUTION!** A factory reset of the wireless settings deletes any customized settings and cannot be undone.
- 1. Press [Y/+] to select "Factory Reset." You will see the message "Reset wireless settings?"
- 2. Press [Y/+] for "Yes" or [MODE] for "Exit." If you select "Exit," the ToxiRAE Pro exits without performing a factory reset.

Exit (the Wireless Submenu)

Press [Y/+] to exit. Wireless is exited, and Monitor Setup is highlighted.

Site ID

Choose and enter an 8-digit alphanumeric Site ID to uniquely identify the particular site where the instrument is to be used. This Site ID is included in the datalog report.

- 1. Press [Y/+] and the display shows the current Site ID. Example: "SITE0001." The left-most digit is highlighted.
- 2. Press [Y/+] repeatedly to select a desired character. Letters increase from current value to Z followed by digits from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around to the letter A. For the last four characters that must be numerical, numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.

Note: The last four characters must be numerals.

3. Press [MODE] to advance to the next character.

Repeat this process until all eight characters of the new Site ID are entered.

To save your new Site ID and exit, press [MODE] repeatedly until "OK" is highlighted. Then press [Y/+].

User ID

Enter an 8-digit alphanumeric User ID to uniquely identify a user. This User ID is included in the datalog report.

- 1. Press [Y/+] and the display shows the current User ID. Example: "USER0000." The left-most character is highlighted.
- 2. Press [Y/+] repeatedly to select a desired character. Letters increase from current value to Z followed by digits from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around to the letter A.
- 3. Press [MODE] to advance to the next character.

Repeat this process until all eight characters of the new User ID are entered.

To save your new User ID and exit, press [MODE] repeatedly until "OK" is highlighted. Then press [Y/+].

User Mode

The ToxiRAE Pro LEL has two user modes:

Basic Basic users can only see and use a basic set of functions.

Advanced Advanced users can see all screens and take advantage of all available functions.

Note: The default value for User Mode is Basic.

To change the User Mode:

- 1. Press [MODE] to step from one option to the other. The highlighting changes each time you press [MODE].
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates the option has been selected).
- 3. When you have completed your selection, press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to register your selection, exit the User Mode submenu and advance to Date.

Date

The Date is expressed as Month/Day/Year, with two digits for each (MM/DD/YY).

The left-most digit is highlighted to indicate it is selected when you enter the Date submenu.

- 1. Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 2. Press [MODE] to advance to the next digit.

Repeat this process until all six digits of the new date are entered.

- 3. Press [MODE] repeatedly until "OK" is highlighted.
- 4. Press [Y/+] to save your selection and advance to Time.

Note: If you do not want to save the change, press [MODE] repeatedly until "Cancel" is highlighted. Press [Y/+] to exit to Time without saving the changes.

Time

The Time is expressed as Hours/Minutes/Seconds, with two digits for each. The time is in 24-hour (military) format of HH:MM:SS.

The left-most digit is highlighted to indicate it is selected.

- 1. Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 2. Press [MODE] to advance to the next digit.

Repeat this process until all six digits of the new time are entered.

- 3. Press [MODE] repeatedly until "OK" is highlighted.
- 4. Press [Y/+] to save your selection, exit the Time submenu and advance to Temp. Unit.

Note: If you do not want to save the change, press [MODE] until "Cancel" is highlighted. Press [Y/+] to exit to Temp. Unit without saving the changes.

Temp. Unit

The display unit of the internal temperature sensor can be switched between Fahrenheit and Celsius.

To change the Temp. Unit:

- 1. Press [MODE] to step from one option to the other. The highlighted option changes each time you press [MODE].
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates the option has been selected).
- 3. When you have completed your selection, press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to save your selection, exit the Temp. Unit menu, and advance to Language.

Language

English is the default language, but other languages can be selected for the instrument.

- 1. Press [MODE] to step from one option to the next. The highlighted option changes each time you press [MODE].
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates this option has been selected).
- 3. When you have completed your selection, press [MODE] repeatedly until "OK" is highlighted.
- 4. Press [Y/+] to save your selection, exit the Language submenu, and advance to Zero At Start.

Zero At Start

When Zero At Start is turned on, the instrument starts with zero calibration every time it is turned on.

- 1. Press [MODE] to choose between "Off" and "On."
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates your selection).
- 3. When you have completed your selection, press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to save your selection, exit the Zero At Start submenu, and advance to LCD Contrast.

LCD Contrast

The display's contrast can be increased or decreased from its default setting. You may not need to ever change the default setting, but sometimes you can optimize the display to suit extreme temperature and ambient brightness/darkness conditions.

- 1. Press and hold [Y/+] to select a desired level of contrast. The range is 1 to 100. Once 100 is reached, pressing [Y/+] again "wraps" around back to 1.
- 2. When you have completed your selection, press [MODE] repeatedly until "Exit" is highlighted.
- 3. Press [Y/+] to save your selection, and exit the LCD Contrast.

Note: If you do not want to save the change, press [MODE] repeatedly until "Cancel" is highlighted. Press [Y/+] to exit without saving the changes.

Exit (Monitor Setup Submenu)

Press [Y/+] to exit. Monitor Setup is exited. Exit (to exit Programming Mode) is highlighted.

11.6. Exit (Exit Programming Mode)

To exit Programming Mode and return to normal operation, press [MODE] until the Exit icon is highlighted. Press [Y/+] to exit. You will see "Updating Settings…" as changes are registered and the mode changes to normal operation.

12. Policy Enforcement

The ToxiRAE Pro LEL can be configured to enforce a facility/company's requirements that calibration and/or bump testing be performed at specified intervals, and to warn the user that calibration/bump testing is required. In addition, it can require calibration or bump testing and not allow normal operation of the instrument unless calibration or bump testing is performed.

If Policy Enforcement is enabled and if the instrument has been bump tested and calibrated in compliance with the policy settings, a check-mark icon is included along the top of the ToxiRAE Pro LEL screen:

 \checkmark

If Policy Enforcement is enabled, then after startup the ToxiRAE Pro LEL displays a screen that informs the user that the instrument requires either a bump test or a calibration. If both are required, then they are shown in sequence.

12.1. Setting Policy Enforcement

You must use ProRAE Studio II to make changes to Policy Enforcement settings. The procedure differs, depending on whether you are using an AutoRAE 2 Cradle, a ToxiRAE Pro LEL Travel Charger, or a ToxiRAE Pro LEL Desktop Cradle.

12.1.1. AutoRAE 2 Cradle

Note: This procedure only works with a single AutoRAE 2 Cradle. It will not work with an AutoRAE 2 Controller.

To program a ToxiRAE Pro LEL via an AutoRAE 2 Cradle, you need ProRAE Studio II Instrument Configuration and Data Management Software, the AutoRAE 2 Cradle connected to a power source, and a USB PC communications cable.

- 1. Connect a USB cable between a PC with ProRAE Studio II and the AutoRAE 2 Cradle.
- 2. Apply power to the AutoRAE 2 Cradle.
- 3. Turn off the ToxiRAE Pro LEL (or put the ToxiRAE Pro LEL into PC Communications Mode) and set it in the cradle.
- 4. Start ProRAE Studio II software on the PC.
- 5. Select "Administrator" and input the password (the default is "rae").
- 6. Click "Detect the instruments automatically" (the magnifying glass icon with the letter "A" in it). After a few seconds, the AutoRAE 2 Cradle is found and it is shown, along with its serial number:

strument		Version Serial	Serial Number	umber Device Location	n Baud Rate		
	ToxiRAE Pro Cradle	V1.10	T0250029PB	COM5	115200		

7. Click on the icon to highlight it, and then click "Select."

o Detect						
etection co	omplete.					Refresh
Instrument		Version	Serial Number	Device Location	Baud Rate	
	ToxiRAE Pro Cradle	V1.10	T0250029PB	COM5	115200	
					Select	Cancel
Ø I		VI.IU.	10230023110			Cano

8. In ProRAE Studio II, the AutoRAE 2 Cradle is shown, including its Serial Number, under "Online":

ProRAE Studio II - [Untitled] File Operation Help			
🟹 🂾 🥪	A M ×		
Online	RAE Pro Cradle(T0250029PB)		
ToxiRAE Pro Cradle V1.10	COM5 115200bps	Administrator	

9. Expand the view to show the ToxiRAE Pro LEL in the AutoRAE 2 Cradle by clicking the "+" to the left of the image of the AutoRAE 2 Cradle:

💯 ProRAE Studio II - [Untitle	ed]		
File Operation Help			
1	A, M, 🔀		
Online			
- 🖉 T	oxiRAE Pro Cradle(T0250029PB)		
	ToxiRAE Pro LEL(G026001EPC)		
ToxiRAE Pro Cradle V1.10	COM5 115200bps	Administrator	

- 10. Double-click on the icon representing the ToxiRAE Pro LEL.
- 11. Click "Setup."



12. In the menu that now appears on the left side, click "Policy Enforcement." It is highlighted, and the Policy Enforcement pane is shown:

ProRAE Studio II - [Untitled] File Operation Help			<u>-0×</u>
	. 🔀		⊡ Online ⊟ ToxiRAE Pro Cradle(T0250029PB) □ ToxiRAE Pro LEL(G026001EPC)
Setup Mod	ToxiRAE Pro LEL	Image: Constraint of the second s	
ToxiRAE Pro Cradle V1.10 CC	OM5 115200bps		Administrator

For "Must Calibrate" and "Must Bump," you have the options of no enforcement or enforcement (including "Can't Bypass," and "Can Bypass").


Must Calibrate. The user is prompted to calibrate the instrument when calibration is due (as set by the calibration interval). There are two programmable options:

- **Can't Bypass.** Unless calibration is performed, the instrument cannot be used, and the only option is to turn off the instrument.
- **Can Bypass.** If calibration is due but the user does not want to perform a calibration, the instrument can still be used.


Must Bump

- **Can't Bypass.** Unless a bump test is performed, the instrument cannot be used, and the only option is to turn off the instrument.
- **Can Bypass.** If a bump test is due but the user does not want to perform one, the instrument can still be used.

These are the screens that are shown on a ToxiRAE Pro LEL after startup if "Can Bypass" is selected:

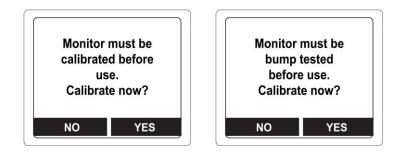

If "Can't Bypass" is selected, the display looks like this, and only allows the options of performing the test or shutting down:

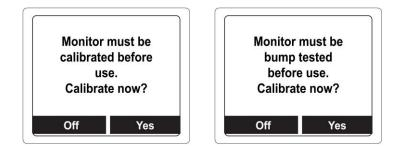

12.1.2. ToxiRAE Pro LEL Desktop Cradle Or Travel Charger

Make sure the AC adapter is connected and that a USB cable is connected to a computer running ProRAE Studio II.

- 1. Turn on the ToxiRAE Pro LEL.
- 2. Hold down [MODE] and [Y/+] to enter Programming Mode.
- 3. Provide the password.
- 4. Press [MODE] until "Enter Communications Mode?" is displayed.
- 5. Press [Y/+]. The screen shows that it is ready by saying "Communications Mode ready…" It is now ready to communicate with the computer running ProRAE Studio II. If you want to exit, press [MODE].
- 6. Start ProRAE Studio II.
- 7. Select "Administrator."
- 8. Input the password (the default is "rae").
- 9. Click "OK."
- 10. Click "A" (detects instruments automatically).
- 11. Click on the instrument's icon when it appears to highlight it.
- 12. Click "Select."
- 13. Click "Setup."
- 14. Click "Policy Enforcement."

The Policy Enforcement pane is shown:


Policy Enforcement
Get and set the unit's policy enforcement feature
Must Calibrate
O Can't Bypass
Can Bypass
Must Bump
O Can't Bypass
Can Bypass
Can Bypass

You can select "Must Calibrate" and/or "Must Bump" and then set whether the user must perform the selected operation in order to use the instrument.

15. Once you have made your selections in ProRAE Studio II, you must upload the changes to the instrument. Click the icon labeled "Upload all settings to the instrument."



16. A confirmation screen is shown. Click "Yes" to perform the upload, or "No" to abort.

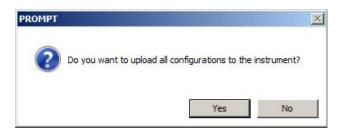

Uploading takes a few seconds, and this progress bar is shown. You can abort the upload by clicking "Cancel."

		Cancel
Σ! ι	Jploading	Time Elapsed:

17. Exit ProRAE Studio II.

18. Press [Y/+] on the ToxiRAE Pro LEL to exit Communication Mode.

12.2. Deactivating Policy Enforcement

12.2.1. AutoRAE 2 Cradle

To deactivate Policy Enforcement when using an AutoRAE 2 Cradle, follow the procedure for changing settings. See page 36 for details.

12.2.2. ToxiRAE Pro LEL Desktop Cradle Or Travel Charger

If the ToxiRAE Pro LEL screen displays the message that it must be bump tested or calibrated, and if the option to bypass bump testing or calibration is not available, you should shut off the instrument and follow the procedure outlined here if you want to change the Policy Enforcement settings:

- 1. Use a USB cable to connect the ToxiRAE Pro LEL in its Travel Charger or Desktop Cradle to a computer running ProRAE Studio II.
- 2. Enter Diagnostic Mode on the ToxiRAE Pro LEL (with the instrument turned off, press and hold [Y/+] and [MODE] until it starts up.
- 3. After startup, enter the password when prompted (default is "0000") and press [MODE].
- 4. Press [MODE] repeatedly until you see the "Enter Communications Mode?" screen.
- 5. Press [Y/+] to enter Communications Mode.
- 6. Start ProRAE Studio II.
- 7. Select "Administrator."
- 8. Input the password (the default is "rae").
- 9. Click "OK."
- 10. Click "A" (detect instruments automatically).
- 11. Click on the instrument's icon when it appears.
- 12. Click "Select."
- 13. Click "Setup."
- 14. Click "Policy Enforcement." The Policy Enforcement pane is shown.
- 15. Deselect Policy Enforcement features you do not wish to use.
- 16. Click "Upload all settings to the instrument."



17. When you see this confirmation. Click "Yes."



Uploading will take a few seconds, and this progress bar is shown:



- 18. When the upload is done, exit ProRAE Studio II.
- 19. Press [Y/+] on the ToxiRAE Pro LEL to exit Communication Mode.

13. Bump Testing & Calibrating The ToxiRAE Pro

Note: Calibration intervals and bump test procedures may vary due to national legislation.

13.1. Bump Testing & Calibrating With An AutoRAE 2™

Bump testing and calibrating a ToxiRAE Pro LEL can be done with an AutoRAE 2 Automatic Test And Calibration Station. Follow all instructions in the AutoRAE 2 User's Guide for successful bump testing or calibration.

13.1.1. Bump (Functional) Testing

With the ToxiRAE Pro LEL in Normal Mode:

- 1. Connect the calibration gas cylinder, flow regulator, and calibration adapter to the ToxiRAE Pro LEL and start the gas flow.
- 2. Make sure the unit goes into alarm and that the buzzer produces at least two beeps per second, the LED lights flash on and off, and the vibration alarm functions. The display backlight should illuminate and an alarm message should be shown in the display.
- 3. Turn off the gas flow.
- 4. Remove the calibration adapter.

Note: Bump testing and calibration can also be performed by using the RAE Systems AutoRAE 2 Automatic Test And Calibration Station. Refer to the AutoRAE 2 User's Guide for instructions.


13.2. Calibration Adapter

The ToxiRAE Pro LEL must be calibrated using a fixed-flow regulator with a flow rate between 0.5 and 1.0 liters per minute. The ToxiRAE Pro LEL is supplied with a special calibration adapter that covers the gas inlet. If the local air has impurities that might interfere with zero (fresh air) calibration, the calibration adapter and a cylinder of clean zero air should be used.

13.2.1. Connecting The Calibration Adapter

The supplied Calibration Adapter has a removable insert to allow bump testing and calibration to be performed on the instrument regardless of whether it has a rubber boot installed. Use the Calibration Adapter without the insert to calibrate the instrument in the rubber boot, and with the insert to calibrate the instrument without the rubber boot on it.

1. Place the Calibration Adapter on the top cap of the ToxiRAE Pro LEL by pressing it into place.

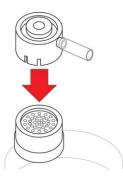

2. Attach the hose from the regulator/calibration gas cylinder to the Calibration Adapter's inlet.

Caution! After calibration is complete, remove the Calibration Adapter. When monitoring, never operate the ToxiRAE Pro LEL with the Calibration Adapter attached. If the Calibration Adapter is attached during normal operation, inconsistent and lower-than-normal readings will occur because of decreased concentration of the gas being monitored.

13.2.2. Disconnecting The Calibration Adapter

After calibrating the ToxiRAE Pro LEL, you must remove the Calibration Adapter by lifting it off the ToxiRAE Pro LEL.

13.3. Zero Calibration

Zero At Start

When Zero At Start is turned on, the instrument starts with zero calibration every time it is turned on.

- 1. Press [MODE] to choose between "Off" and "On."
- 2. Press [Y/+] to make your selection (the dark circle in the "radio button" indicates your selection).
- 3. When you have completed your selection, press [MODE] repeatedly until "Exit" is highlighted.
- 4. Press [Y/+] to save your selection, exit the Zero At Start submenu, and advance to LCD Contrast.

CAUTION: WHEN THIS FUNCTION IS ACTIVATED, THIS AREA MUST BE FREE OF FLAMMABLE GASES.

Zero Calibration Operation

This operation sets the zero point of the sensor calibration curve for clean air. Expose the ToxiRAE Pro LEL to a clean air source with 20.9% oxygen and without any organic, toxic, or combustible gas impurities. This "Zero Air" can come from a cylinder or clean ambient air.

Note: If you use a zero air cylinder, you must use the ToxiRAE Pro Calibration Adapter. Using a calibration adapter is not necessary for calibration in fresh air.

Turn on the ToxiRAE Pro LEL. Once it has been through its startup, enter Programming Mode:

1. Press and hold [MODE] and [Y/+] until you see the Password screen.



2. Input the 4-digit password:

- Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- Step from digit to digit using [MODE].
- When you are done, press [MODE] until OK or Cancel is highlighted.
- Press [Y/+] to register the password (if OK is highlighted) or to exit without entering the password (if Cancel is selected).

If you make a mistake, you can cycle through the digits by pressing [MODE] and then using [Y/+] to change the number in each position.

Note: The default password is 0000.

If you do not know the password, do not enter anything. Just press [MODE] repeatedly to highlight OK, and then press [Y/+].

Note: If the ToxiRAE Pro LEL is in Programming Mode and you do not press a key within 60 seconds, it exits Programming Mode and re-enters Normal Mode.

- 1. At the Calibration screen, press [Y/+].
- "Zero Calib" is highlighted. Make sure the ToxiRAE Pro is in clean air. Otherwise attach a cylinder of zero gas to the Calibration Adapter installed on the instrument.
- 3. Press [Y/+]. The message "Apply zero gas..." is displayed.
- 4. Start the flow of the zero gas (if used) and press [Y/+] to start the zero calibration.
- 5. There is a 60-second countdown, during which time the screen shows the word "Zeroing..." and the countdown.
- 6. Upon completion, it says "Zero is done! Reading = 0% LEL" (the reading should be 0% LEL or very close to it).
- 7. "Span Calib" is highlighted.

Note: You can abort the zero calibration during its countdown by pressing the [MODE] key.

Important! If you used the Calibration Adapter and a zero air cylinder, you must remove the Calibration Adapter from the ToxiRAE Pro LEL. If the Calibration Adapter is attached during normal operation, inconsistent and lower-than-normal readings will occur because of decreased concentration of the gas being monitored.

13.4. Span Calibration

This procedure determines the second point of the sensor calibration curve for the sensor.

To begin calibration, connect the calibration gas cylinder, flow regulator, and calibration adapter to the ToxiRAE Pro LEL.

With the ToxiRAE Pro in Programming Mode, and with Span Calib highlighted, follow this procedure:

1. Press [Y/+]. The screen displays the current (or default) calibration gas and its concentration. For example:

Cal. Gas: Methane Span=50%LEL Change?

- Press [MODE] if you do not want to change it.
- Press [Y/+] if you want to change it.

If you entered the Calibration Menu without supplying the correct password, or supplied the correct password but chose not to change the Cal.Gas, you will see a message like this:

Cal.Gas: Methane Span=50%LEL Apply gas...

- 2. Press [Y/+] to start calibration.
- 3. Press [MODE] if you want to quit without calibrating.

Note: If the sensor calibration fails, try again. If calibration fails again, replace the sensor.

During calibration, the calibration gas name, its concentration, and the countdown are displayed. Depending upon the device alarm settings, the monitor may go into low and then high alarm once span calibration is complete, which is expected in response to the test gas.

Note: You can abort span calibration during its countdown by pressing [MODE].

Upon completion, the screen "Span is done!" appears along with the reading (it should be within 10% of the span gas concentration).

Important! After calibration is complete, you must remove the Calibration Adapter from the ToxiRAE Pro LEL. If the Calibration Adapter is attached during normal operation, inconsistent and lower-than-normal readings will occur because of decreased concentration of the gas being monitored.

13.4.1. Changing Span Gas Concentration

If you selected "Change" for span gas concentration, the following screen appears:

Span	
0050	0%LEL
ок	Cancel
\rightarrow	1

- 1. Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9. Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 2. Step from one digit to the next by pressing [MODE].
- 3. When you are done, press [MODE] until either "OK" or "Cancel" is selected. Press [Y/+] to register your selection (if "OK" is highlighted) or to exit without registering it (if "Cancel" is selected).

14. Diagnostic Mode

The ToxiRAE Pro LEL's Diagnostic Mode can only be accessed at startup time. In Diagnostic Mode, ToxiRAE Pro LEL displays readings in raw counts instead of units such as %LEL.

14.1. Entering Diagnostic Mode

- 1. With the ToxiRAE Pro LEL turned off, press and hold both [MODE] and [Y/+].
- 2. When the display turns on and the password screen appears, release the keys.
- 3. Enter the 4-digit password (the password is the same as the one for the Programming Mode):
 - Step from one position in the four-character string to the other by pressing [MODE].
 - Press [Y/+] repeatedly to select a desired number. Numbers increase from 0 to 9.
 - Once 9 is reached, pressing [Y/+] again "wraps" around back to 0.
- 4. When you are done, press [MODE] until either OK or Cancel is selected. Press [Y/+] to register the password (if "OK" is highlighted) or to exit to Normal Operating Mode without entering the password (if "Cancel" is selected).

14.2. Navigating Diagnostic Mode

In Diagnostic Mode, the ToxiRAE Pro LEL provides raw counts for sensor, battery, and other readings. Most of these screens are useful only to service technicians. Therefore, if you require information on Diagnostic Mode, refer to the ToxiRAE Pro LEL Service Guide.

The ToxiRAE Pro LEL's Diagnostic Mode can only be accessed at startup time. In Diagnostic Mode, ToxiRAE Pro LEL displays readings in raw counts instead of units such as %LEL.

14.3. Exiting Diagnostic Mode

- 1. Turn off the ToxiRAE Pro LEL by pressing and holding [MODE]. There will be a standard shutoff countdown.
- 2. When the instrument shuts off, you will be alerted. Release your finger.

Note: The next time you start ToxiRAE Pro LEL, hold only [MODE], and it will automatically start in Normal Mode.

15. Alarm Signal Summary

Alarm Message/ Priority	Condition	Alarm Signal
	Super Alarm	4 beeps/flashes per second
(Man Down)	Man Down Alarm	3 beeps/flashes per second
(Man Down Warning)	Man Down Warning	2 beeps/flashes per second
LAMP	Lamp failure	3 beeps/flashes per second
MAX	Gas exceeds electronics' maximum range	3 beeps/flashes per second
OVER	Gas exceeds measurement range	3 beeps/flashes per second
HIGH	Gas exceeds "High Alarm" limit	3 beeps/flashes per second
LOW	Gas exceeds "Low Alarm" limit	2 beeps/flashes per second
NEG	Gas reading measures less than zero	1 beep/flash per second
CAL	Calibration failed, or needs calibration	1 beep/flash per second
Offline	Offline from network communcations	1 beep/flash per second
Bat	Low battery	1 flash, 1 beep per minute plus battery icon flashes on display

Alarm types include:

The alarm priority is as follows (in the event of multiple simultaneous alarms):

Super Alarm > Man Down Alarm > Man Down Warning > Max > Over > High > Low > Neg > Cal Failed > Bump Failed > Cal Required > Bump Required > Offline > Bat

Alarm Mode

There are two selectable alarm types:

Auto Reset	When an alarm is triggered and after the alarm condition is no longer present, the alarm stops and resets by itself.
Latch	When the alarm is triggered, it will not cease until you manually turn it off.
	The latched setting controls alarms for High Alarm and Low Alarm.
	Note: To clear an alarm when the instrument is set to "Latched,"

press [Y/+] when the main (measurement) display is shown.

16. Downloading Datalogs And Performing PC-Based Instrument Configuration and Firmware Upgrades

The ToxiRAE Pro LEL communicates with a PC running ProRAE Studio II Instrument Configuration and Data Management software (version 1.03 or higher) to download datalogs, configure the instrument, or upload new firmware.

The ToxiRAE Pro LEL must be connected to a PC through the supplied Charging / PC Communications Cradle and must be in the PC communications mode.

- 1. Make sure the Charging/PC Communications Cradle has power from its AC adapter (the LED on the front of the cradle should be illuminated).
- 2. Use the supplied PC Communications Cable (USB to mini-USB cable) to connect the Cradle to a PC.
- 3. Turn on the ToxiRAE Pro LEL. Make sure it is running in Normal mode (with the main measurement screen with its reading showing).
- 4. Insert the ToxiRAE Pro LEL in the cradle.
- 5. Activate the PC communications mode on the ToxiRAE Pro LEL by pressing [MODE] repeatedly, starting from the main measurement screen until you reach the "Enter PC Comm and stop measurement?" screen.
- 6. Press [Y/+]. Measurement and datalogging stop, and the instrument is now ready to communicate with the PC. The display now says "PC comm ready..."
- 7. Start up the ProRAE Studio II software, enter a password, and detect the instrument following the directions provided in the ProRAE Studio II User's Manual.
- 8. Follow the instructions in the ProRAE Studio II User's Manual to download the datalog, configure the instrument settings, or update the ToxiRAE Pro LEL's firmware.
- 9. When you are done, press [MODE] to exit the PC communications mode on the ToxiRAE Pro LEL. The screen displays "Sensor initializing," after which the instrument returns to operating in Normal mode.

17. Maintenance

Maintenance should be performed only by a qualified person who has proper training and fully understands the contents of this manual.

The following guidelines should be followed when changing the battery:

- 1. Turn off the unit before changing the battery.
- 2. When replacing the battery, take note of its orientation. The connectors on the circuit board should go into the matching slots in the battery.


WARNING

To reduce the risk of ignition of hazardous atmospheres, replace the battery only in areas known to be non-hazardous.

17.1. Replacing the ToxiRAE Pro LEL Li-Ion Battery

Caution: Turn off the ToxiRAE Pro LEL before removing or replacing the battery.

- 1. If the rubber boot is on the ToxiRAE Pro LEL, remove it (refer to page 56 for details).
- 2. Remove the cap by unscrewing it.

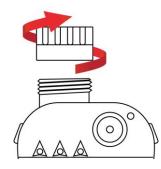


- 3. Remove the sensor module by gripping it with your fingers and pulling it out. Do not use tools, which could damage the sensor module.
- 4. Place the ToxiRAE Pro LEL face-down on a soft surface.


5. Remove the four screws on the back of the instrument by turning them counterclockwise.



5. Hold the ToxiRAE Pro LEL down and separate the rear cover from the front by pulling from the top and tilting it open without disconnecting the ribbon cable connecting the two halves.

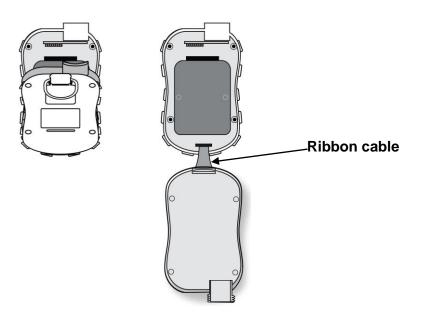


 6. Carefully disconnect the battery from the battery connectors on the circuit board by pulling it toward the bottom of the instrument. Be careful not to damage the ribbon cable.



7. Before installing a new battery, visually inspect the contact pins on the ToxiRAE Pro LEL circuit board to make sure they are not bent. If they are, carefully straighten them before installing the battery. Install the new battery (part number

 G02-3004-000), making sure it is inserted fully. Make sure the battery connectors on the circuit board go all the way into the connector slots in the battery.




- 8. Inspect to make sure the ribbon connector is still connected, and plug it back in if it has come unplugged.
- 9. Place the cover over the compartment by tilting it up and then fitting it in place.



10. Tighten all four screws by turning them clockwise with a torque-limiting screwdriver (preferably an electric one). Tighten them in the numerical order shown here, to a torque rating of 3.54 to 4.43 lbf-in (4.08 to 5.10 kgf-cm).

Note: Incorrectly tightening the screws may compromise the instrument's IP rating.

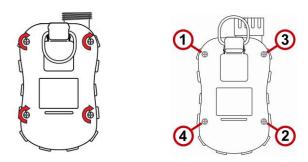

- 11. Inspect the filter in the top cap and replace if necessary.
- 12. Replace the sensor module.
- 13. Screw on the top cap.
- 14. Install boot.

Important! Charge the battery completely before using the ToxiRAE Pro LEL, and check the calibration before placing the instrument in service.

17.2. Proper Battery Disposal



The Waste Electrical and Electronic Equipment (WEEE) directive (2002/96/EC) is intended to promote recycling of electrical and electronic equipment and their components at end of life. This symbol (crossed-out wheeled bin) indicates separate collection of waste electrical and electronic equipment in the EU countries. This product may contain one or more Nickel-metal hydride (NiMH), Lithium-ion, or Alkaline batteries. Specific battery information is given in this user guide. Batteries must be recycled or disposed of properly.

At the end of its life, this product must undergo separate collection and recycling from general or household waste. Please use the return and collection system available in your country for the disposal of this product.


Sensor Specifications, Cross-Sensitivities, And Calibration Information

For information on sensor specifications, cross-sensitivities, and calibration information, refer to RAE Systems Technical Note TN-114: Sensor Specifications And Cross-Sensitivities (available for free download from www.raesystems.com). All specifications presented in this Technical Note reflect the performance of standalone sensors. Actual sensor characteristics may differ when the sensor is installed in different instruments. As sensor performance may change over time, specifications provided are for brand-new sensors.


17.3. Removing And Installing The Rubber Boot

The protective rubber boot on the ToxiRAE Pro LEL must be removed before the sensor top cap or back of the instrument can be removed. When removing the boot, follow these steps outlined here.

- 1. Flip up the tab on the belt clip on the rear of the instrument.
- 2. Remove the Philips screw that holds the clip in place.

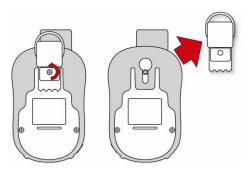

- 3. Stretch the bottom corners of the boot and gently slide the bottom of the boot over the rear of the ToxiRAE Pro LEL.
- 4. Slide the boot up until it comes off of the instrument. Make sure that you do not force it to move if it sticks against the top cap. Gently nudge it.

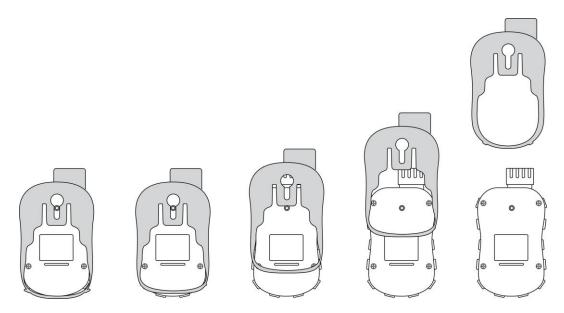

5. Inspect the rubber boot for damage, and replace it if it is cracked or torn.


When replacing the boot, simply reverse the procedure, sliding the boot onto the instrument and then carefully stretching it over the bottom portion of the instrument. Do not forget to replace the belt clip.

17.4. Filter Replacement


A filter is permanently attached inside the ToxiRAE Pro LEL's top cap, which helps to keep debris and moisture out. This filter should be inspected periodically, and the cap and rubber insert should be inspected for damage. If the filter is dirty or the cap shows signs of damage, replace the entire instrument cap assembly, including the cap and filter (part number G02-0307-003, package of three).

To replace the cap assembly:

1. Remove the top cap by unscrewing it:

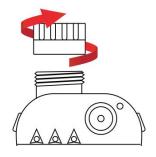


2. Discard the cap/filter and replace it with a new one by screwing it on:

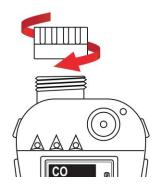


17.5. Replacing The Sensor

Follow the instructions for removing the cap in the previous section.

1. Gently lift out the sensor module with your fingers:

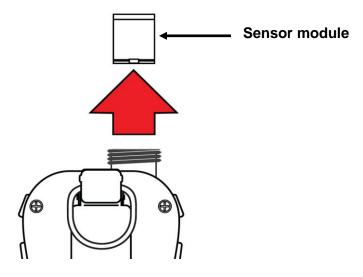

2. The sensor can only go into its slot one way. The connector inside the ToxiRAE Pro LEL and the indexing guides are good visual indicators of how to set the sensor into position.

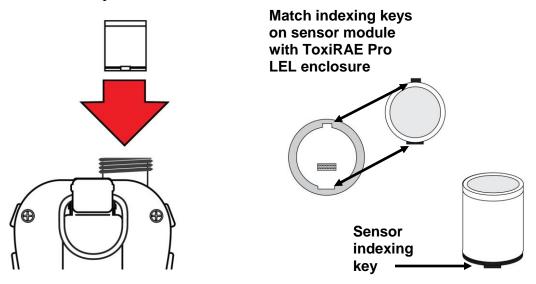

- 3. Place the sensor module into the ToxiRAE Pro LEL. Make sure the indexing keys are aligned (the sensor can only go in one way) and that it is seated firmly.
- 4. Carefully place the cap back onto the ToxiRAE Pro LEL by screwing it on.

Note: Always calibrate the ToxiRAE Pro LEL after replacing the sensor module.

17.6. Cleaning The Exterior

Occasional external cleaning of the instrument with a soft cloth is recommended. Do not use detergents or chemicals. If necessary, you can use a damp cloth (water only). It is a good idea to install the Calibration Adapter before cleaning the ToxiRAE Pro LEL's housing, to keep dirt, dust, or moisture away from the sensor openings and to keep the filter clean.

Visually inspect the contacts at the base of the ToxiRAE Pro LEL and on the charging cradle to make sure they are clean. If they are not, wipe them with a soft, dry cloth. Never use solvents or cleaners.

17.6.1. Ordering Replacement Parts

If you need replacement parts, contact your local RAE Systems distributor. A list of authorized distributors is available online:

http://www.raesystems.com

18. Troubleshooting

Problem	Possible Rea	sons & Solutions
Cannot turn on power	Reasons:	Depleted battery.
1		Defective battery.
		-
	Solutions:	Replace battery.
Lost password	Solutions:	Use ProRAE Studio II
		software to change the
		password.
		Call Technical Support
		at +1 408-752-0723 or
		toll-free at +1 888-723-4800
Deading abnormally	Reasons:	
Reading abnormally Low	Reasons:	Calibration Adapter is attached.
LOW		Incorrect calibration.
		meoneet canoration.
	Solutions:	Remove Calibration
		Adapter.
		Calibrate the ToxiRAE
		Pro LEL.
Buzzer, LEDs, or	Reasons:	Alarms may be turned
vibration alarm		off.
Inoperative		Blocked alarm port.
		Bad buzzer, LEDs, or
		vibration alarm.
	Solutions:	Enable alarms in the
	Solutions:	Buzzer & Light section
		of the Alarm Settings
		sub-menu in the
		Programming menu.
		Unblock alarm port.
		Call authorized service
		center.

19. Technical Support

To contact RAE Systems Technical Support Team:

Monday through Friday, 7:00AM to 5:00PM Pacific (US) Time Phone (toll-free): +1 888-723-4800 Phone: +1 408-952-8461 Email: tech@raesystems.com

Critical after-hours support is available:

+1 408-952-8200 select option 9

20. RAE Systems Contacts

RAE Systems

World Headquarters 3775 N. First St. San Jose, CA 95134-1708 USA Phone: +1 408.952.8200 Fax: +1 408.952.8480

E-mail: customerserv@raesystems.com Web Site: www.raesystems.com

RAE Systems Technical Support

Monday through Friday, 7:00AM to 5:00PM Pacific Time Phone: +1.408.952.8461 Email: tech@raesystems.com

Life-critical after-hours support is available +1.408.952.8200 select option 9

RAE Systems Europe ApS

Kirstinehøj 23 A DK-2770 Kastrup Denmark **Phone:** +45 86 52 51 55 **Fax:** +45 86 52 51 77 orders@raeeurope.com sales@raeeurope.com service@raeeurope.com **Web:** www.raesystems.eu

RAE Systems UK Ltd

D5 Culham Innovation Centre Culham Science Centre Abingdon, Oxon OX14 3DB United Kingdom Phone: +44 1865408368 Fax: +44 1235531119 Mobile: +44 7841362693 Email: raeuk@raeeurope.com

RAE Systems France

ZI des Ayats 679390 MILLERY France **Phone:** +33 4 78 46 16 65 **Fax:** +33 4 78 46 25 98 **Email:** info-france@raeeurope.com **Web:** www.raesystems.fr

RAE BeNeLux BV

Hoofdweg 34C 2908 LC Capelle a/d IJssel The Netherlands **Phone:** +31 10 4426149 **Fax:** +31 10 4426148 **Email:** info@rae.nl **Web:** www.rae.nl

RAE Systems Spain, s.l.

Av. Remolar, 31 08820 El Prat de Llobregat Spain Phone: +34 933 788 352 Fax: +34 933 788 353 Mobile: +34 687 491 106 Email: mdelgado@raespain.com Web: www.raespain.com

RAE Middle East

LOB 7, Ground Floor, Office 19, Jebel Ali Free Zone Dubai, United Arab Emirates **Phone:** +971.4.887.5562 **Email:** mesales@raesystems.com

RAE Systems (Hong Kong) Ltd.

Room 8, 6/F, Hong Leong Plaza 33 Lok Yip Road Fanling, N.T, Hong Kong **Phone:** +852.2669.0828 **Fax:** +852.2669.0803 **Email:** hksales@raesystems.com

RAE Systems Japan

403 Plaza Ochanomizu Bldg. 2-1 Surugadai Kanda Chiyoda-Ku Tokyo, Japan **Phone:** 81-3-5283-3268 **Fax:** 81-3-5283-3275 **Email:** jpsales@raesystems.com

RAE Systems Korea

#1010, DaeMyungAnsVill First, Sang-Dong 412-2, Wonmi-Gu, Bucheon, Kyungki-Do, Korea
Phone: 82-32-328-7123
Fax: 82-32-328-7127
Email: krsales@raesystems.com

21. Appendix A: Regulatory Information

SAFETY INSTRUCTIONS

Read Before Operating

This manual must be carefully read by all individuals who have or will have the responsibility of using, maintaining, or servicing this product. The product will perform as designed only if it is used, maintained, and serviced in accordance with the manufacturer's instructions. The user should understand how to set the correct parameters and interpret the obtained results.

CAUTION!

Only use RAE Systems battery pack P/N: G02-3004-000. Do only charge the battery pack using RAE Systems charger outside hazardous area. Use of non-RAE Systems components will void the warranty and can compromise the safe performance of this product. Warning: Substitution of components may impair intrinsic safety.

ToxiRAE Pro LEL Marking

The ToxiRAE Pro LEL is certified according to the IECEx scheme, ATEX and CSA for US and Canada as protected by intrinsic safety.

The ToxiRAE Pro LEL is marked with the following information: RAE SYSTEMS 3775 N. 1st. St., San Jose CA 95134, USA ToxiRAE Pro LEL Type PGM-1820. Serial No/barcode: XXXX-XXX-XX

IECEx SIR IECEx SIR 10.0096X II 1G Ex ia IIC T4 Ga SIRA 10 ATEX 2189X Ex ia IIC T4 Ga Ex ia IIC T4 Ga	2010 2360054 I.S. for Cl.I Dv 1, Grps A,B,C,D T-Code T4. Class I, Zone 0 A/Exia IIC T4 C22.2 No.152-M1984 ANSI/ISA-12.13.01-2000 Intrinsically safe/ Securite Intrinseque/Exia
---	---

 $-20^{\circ} \text{ C} < \text{Tamb} < +50^{\circ} \text{ C};$

Um: 20V

Battery pack: G02-3004-000

Warning: Read and understand Manual before operating

Warning: Substitution of components may impact intrinsically safety

Operation Area and Conditions

Hazardous Areas classified by Zones

ToxiRAE Pro LEL (PGM1820) are intended to be used in hazardous areas classified zone 0, zone 1 or zone 2, where gases of explosion groups IIA, IIB or IIC and T4 may be present.

For North America and Canada the equipment can further be used in Class I, Zone 0

Hazardous Areas classified by Divisions

ToxiRAE Pro LEL is intended to be used in hazardous areas classified for Class I Div. 1 or 2, within the temperature range of -20° C to $+50^{\circ}$ C, where gases of explosion groups A, B, C or D and temperature code T4 may be present.

Instruction For Safe Use

Strictly follow the instructions for safe use. Application of the ToxiRAE Pro LEL requires full understanding and strict observation of the instructions.

Only use RAE Systems battery pack P/N: G02-3004-000

Do only charge the battery pack using RAE Systems charger outside hazardous area (Um: 20V).

Use In Hazardous Areas

Equipment which is intended for use in explosive atmospheres and which has been assessed and certified according to international regulations may be used only under specified conditions. The components may not be modified in any way.

The appropriate regulations for service and repair must be properly observed during such activities.

Year of manufacture

To identify the year of manufacture, refer to the serial number of the instrument.

The second to last digit in the serial number indicates the year of manufacture. For example, "M" indicates the manufacturing year is 2010.

First digit	Year	
J	2008	
К	2009	
Μ	2010	
N	2011	
Р	2012	
Q	2013	
R	2014	
S	2015	
Т	2016	
U	2017	
V	2018	
W	2019	





P/N G02-4028-000 Rev. C March 2013